





Efficiency of time and space in production



Yamaha's answer to Next Generation of Production Line design


- ► Reduction of Tact Time in transportation
- ➤ Flexibility in line design
- ➤ Easy maintenance
- ► Low operation cost
- ► Improved Productivity
- ➤ Reduces line design time
- Space saving design
- **Durability**









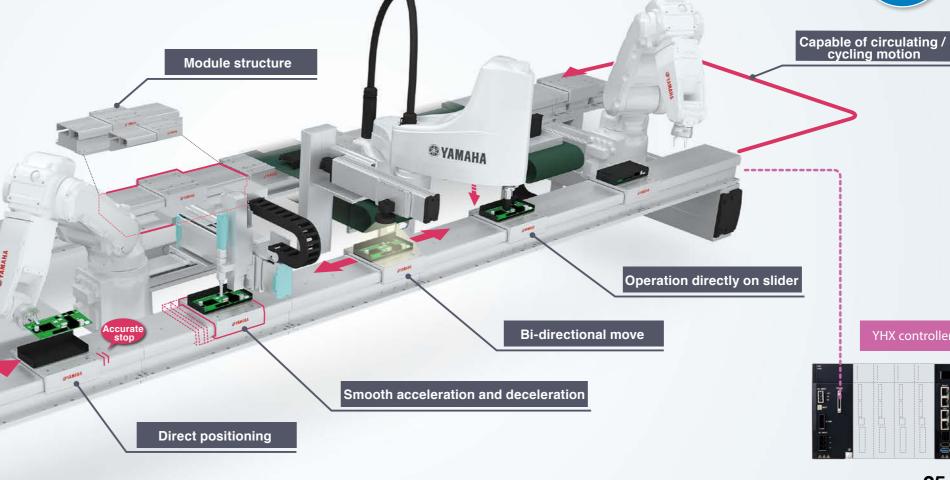

Adding productivity to transportation process

Convert transfer process into "value-added" assembly process

YHX controller

Controllable line length Max. 25.5 m \*

мах. **64** units \* controllable sliders

\* It may differ depending on the system configuratio

Able to perform narrow pitch and high speed transport.

**Individual ID** recognition. absolute position system. No origin process needed.


Complete

**Built-in driver and** reduced wiring.

Advanced linear conveyor module with high speed transport.

# LCMR200

Linear Conveyor Module

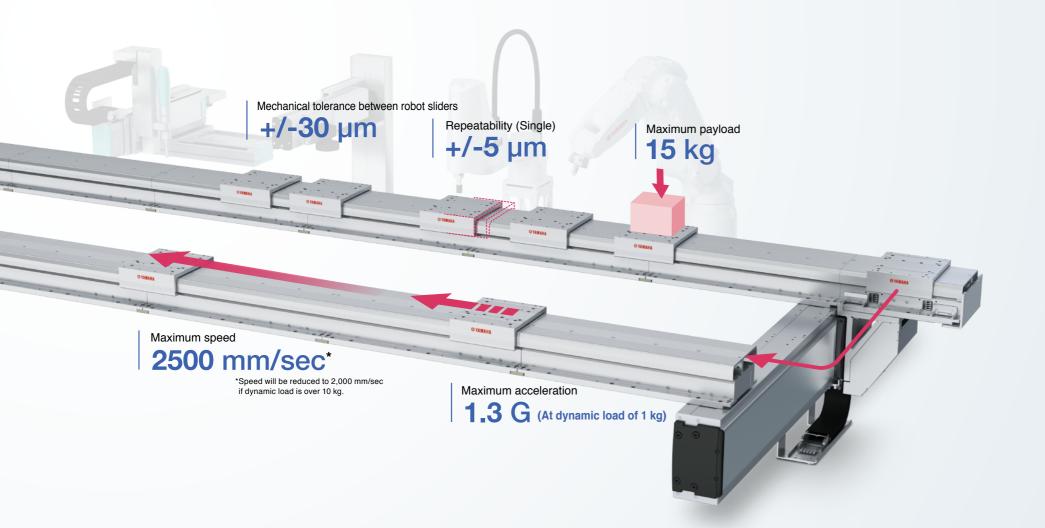


# LCMR200 vs Conventional Conveyor System



# From ordinary "passive flow" to "active position transport".


By converting conveyor flow into active production process improves profitability.

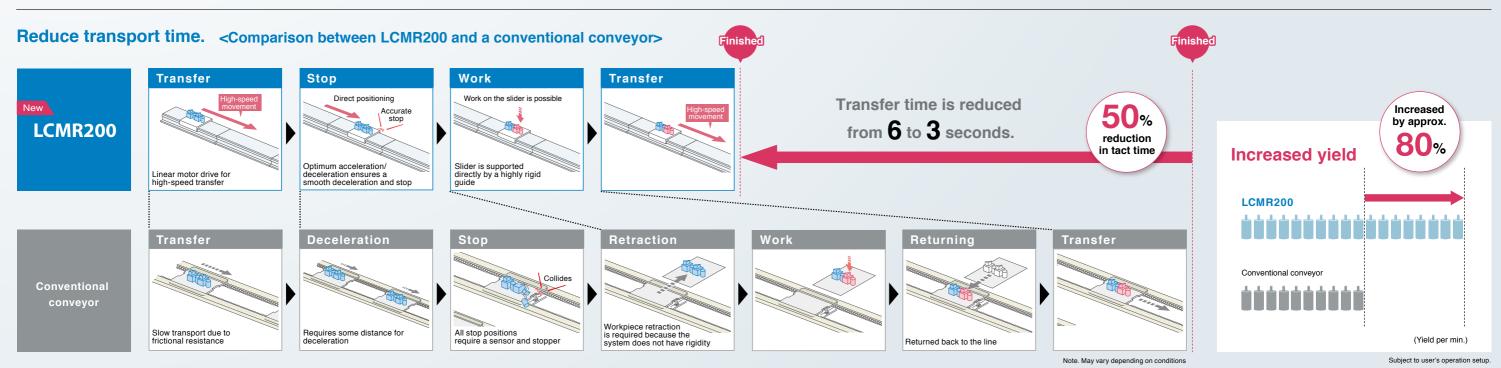

# Superior performance that improves the transfer environment.




# Easy modular connection with Connecting Plate and **Connecting Unit**

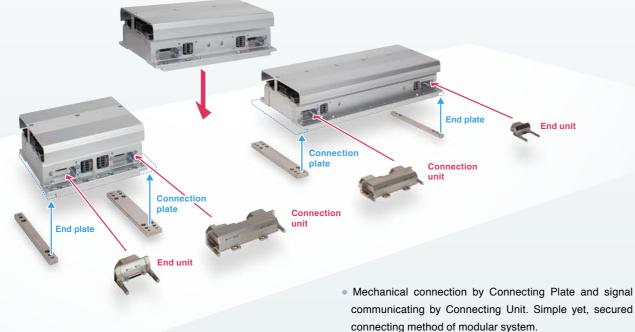


# Top enclosure design for protection.

 Top enclosure was designed to protect internal mechanism from any fallen object during line setup process.

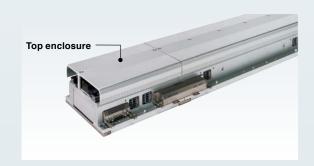

# Low profile structure

 By adopting a newly developed linear motor, the module height is approx. 30 % down compared to LCM100. The space under the frame can be effectively utilized.

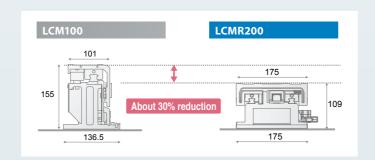


# Saves space through proximity installation of forward and returning modules


<Cable extraction direction can be selected Front Rear >







• Since the cable extraction direction of a module can be selected, the degree of freedom in electrical wiring is improved when installed on the equipment. In particular, when the cable extraction direction is reversed on the forward and returning modules in the horizontal circulation layout, the module pitch can be made close to the shortest level of 200 mm. This can shorten the cycle time and reduce the installation space during circulation.

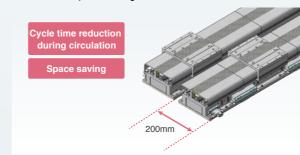

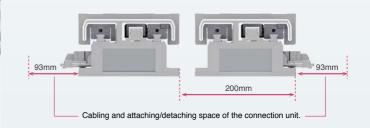

LED indicators that show the module status can be visually recognized from both the front and rear of the module.

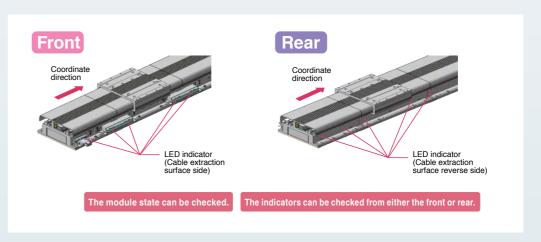

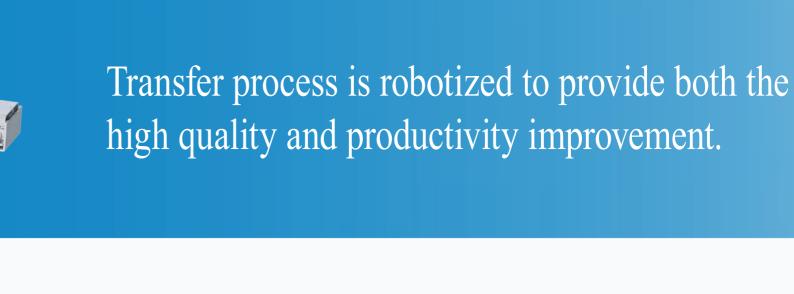

# All the sliders can be operated /

Speed and acceleration can be programmed by each move.
 All carriages can be controller individually.

programmed independently.



# **High acceleration rate**

 High speed motion between an extremely short distance is possible even in a high density process or pitch feed.





# Mechanical tolerance between sliders +/-30 $\mu$ m (Dowel hole standard)

Due to tis machined accuracy, each carriage has own tolerance at one stopping point, however,
 LCMR200 can limit the slide machine difference to +/-30 μm, and is suitable for high precision process.
 As RFID, etc. is not necessary, cost reduction is possible.

# **Built-in driver saves electrical wiring**


Motor driver is incorporated inside module and entire LCMR200 is controlled by YHX controller through YQLink cable.
 It also contributes to space saving inside the control panel.

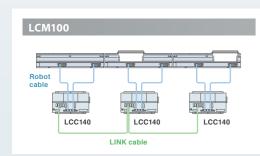

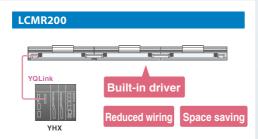


# No origin process needed

Newly developed high-precision full-range absolute server eliminates the need for return-to-origin.
 The operation can be started and stopped easily, so there is no time loss even when starting or restarting.

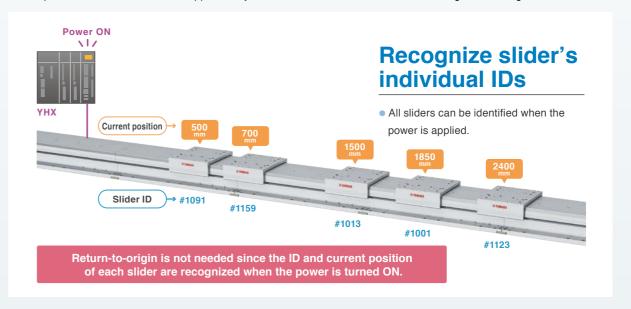

# Concentrated control by the YHX controller

• Including the operation environment, all sliders and single-axis robots on the transfer process can be controlled.

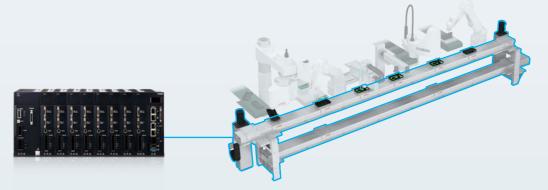

# Simple control with the standard profile

 According to the commands from the host PLC, it adopts a simple control method that operates the sliders and single-axis robots as positioners <See Page 16 for detail>.

# Versatile and value added transport between work process.

Improve cycle time and reduce line floor space.


Increase productivity and cost performance.


# **Process sharing**

Direct drive | Slider backward travel



- Carriage is bi-directional and one work station can perform more than one task. Saving total line cost and floor space.
- High speed bi-directional move and simultaneous independent operation of multiple carriages

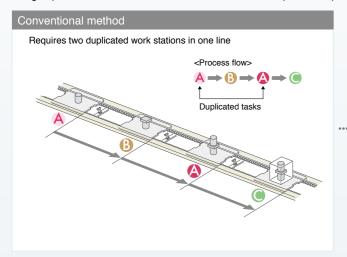

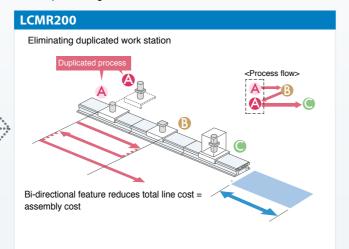


## Variable speed control between work stations.










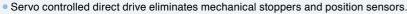

- Simple position setting by entering point data in a program.
- Flexibility in setup for production lot change
- Saving flow time by narrow pitch incremental move and high speed move.

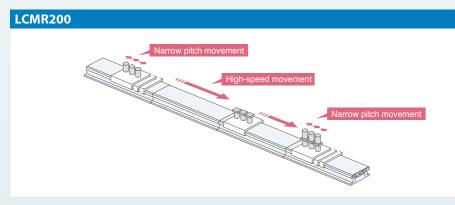

# Easily serviceability = Easy troubleshooting

- Covered structure of module keeps internal mechanism free from foreign objects
- The environment-resistant magnetic sensor is resilient to contamination.
- · Easy positioning with no precision setting.
- Non-contact motor and linear scale design eliminates mechanical wearing
- Low particle generation (only mechanical contact is guide rail)
- Standardized components reduce spare parts SKU.
- · Parts can be replaced easily.
- Operation can be restored just by replacing the slider or linear module, and the manufacturing line down time can be kept to a minimum.

# Assembly can be done while parts are on conveyor

Highly rigid guide









• The highly rigid guide enables assembly and processing on the transport line.

No need to reposition parts to/from conveyor. Floor line space is reduced substantially.

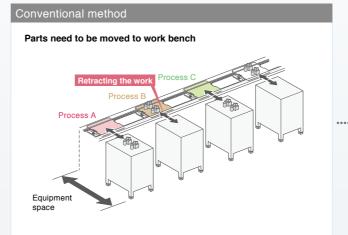


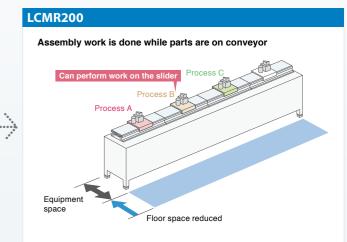



Sleek and simple configuration. Simplified line design process with flexibility and efficiency by modular concept.

All carriages and peripheral linear robots can be controlled by PLC through one YHX controller.

· Layout example with a combination of the module and circulation unit.

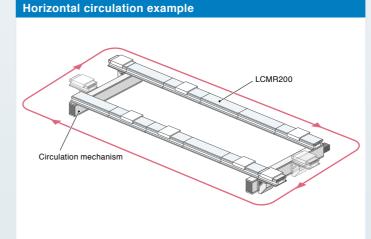

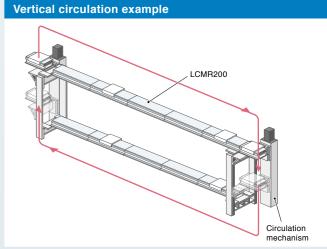

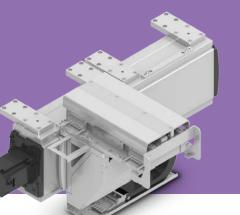


# **Circulation unit**


Circulation units are available as standard.


Because the circulation units are manufacturer's standard products, the stable operation of the production line is achieved without worrying about module "deviation". Furthermore, you can also save time and effort in design.


YAMAHA genuine circulation units achieve the stable operation of the production line.



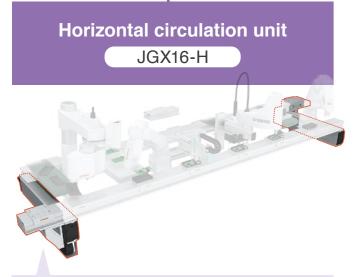

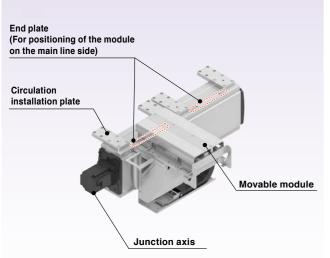

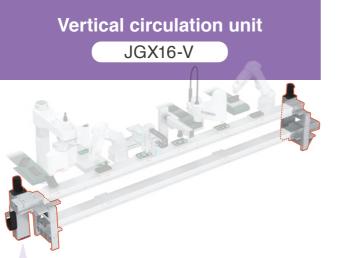

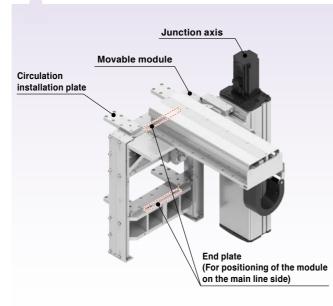



#### **Circulation unit features**

#### POINT Measures against "deviation" necessary to maintain the accuracy are taken thoroughly.

Maintaining the accuracy is very important for transfer sections, but is not easy since "deviation" may occur.


Use of YAMAHA genuine circulation units makes it possible to eliminate such "deviation" and maintain the accuracy.

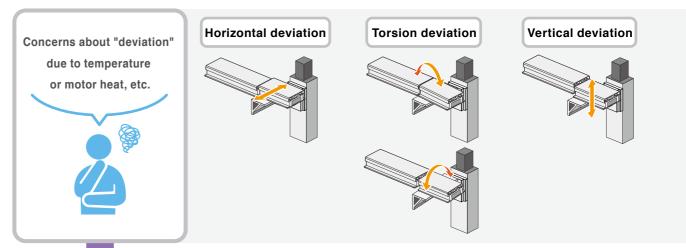

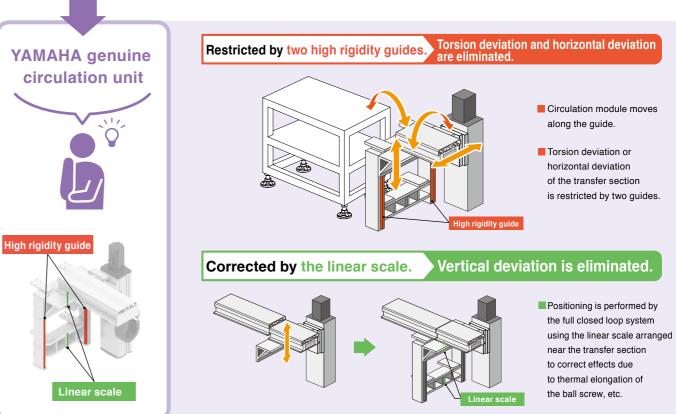

### POINT Easy adjustment

The adjustment has been performed before shipment from the factory. After the product has been arrived, the adjustment is completed in a short time by simply attaching the module to the equipment based on the end plate and performing the teaching.

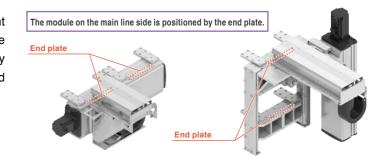




# **YHX** controller

Linear conveyor module "LCMR200" can be controlled via YHX controller from the host PLC.

# Reduces production line configuration time

### **Stacking modular structure**

#### No wiring between modules needed.

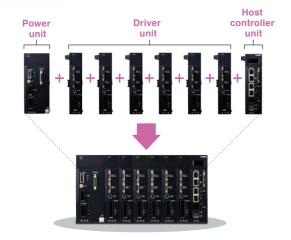


Incorporation a control power supply, motor drive power supply, high speed network communication, safety circuit into a stacking modular structure. Eliminates wiring between units, reducing conventional wiring cost and wiring man-hour to 30% to 50%.


The stacking structure including host, power and driver is the very first in the industry.



# Configuration example

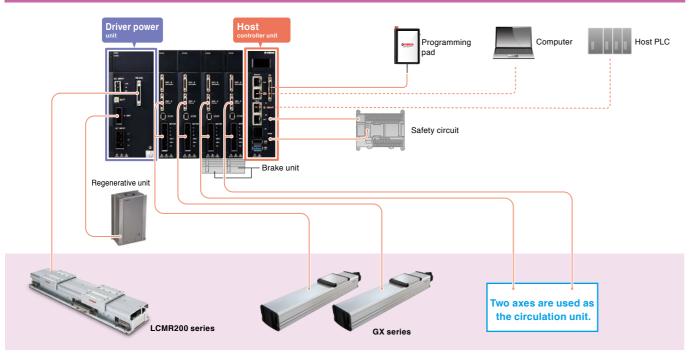


## System configuration diagram

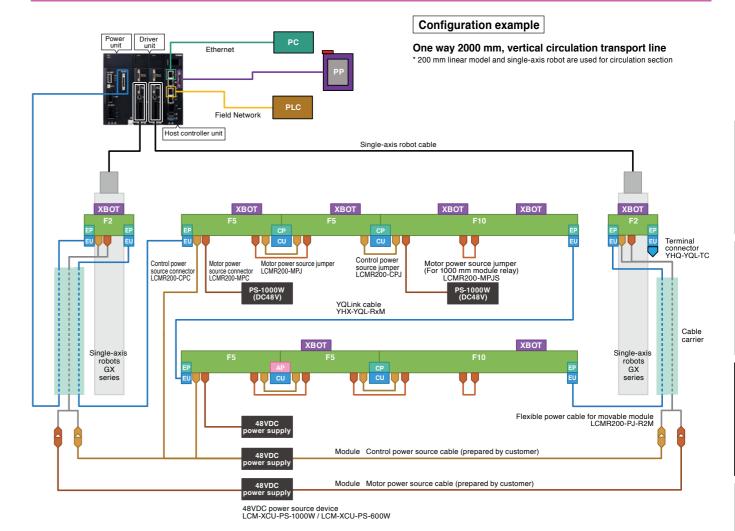

Icon	Name	Description
	Linear module	Size of modules selected here is for reference only.  The cable extraction direction can be selected in units of cluster (multiple linear modules are connected to configure one line).  A linear module used in the circulation part is also common.
XBOT	Robot slider	A slider that operates on the linear module.
EP	End plate	Position a linear module on both ends of a cluster.
СР	Connection plate	The adjacent modules are positioned and connected.
AP	Adjuster plate	This adjuster plate is used to adjust the return line length to match the reference line.
EU	End unit	Connect with the YQLink cable or YQLink terminal end unit on both ends of a cluster.
CU	Connection unit	Between module communication of adjacent modules is connected.
<b>U</b>	Control power supply connector	A connector to supply control power source from 48 VDC power source to the linear module.
	Control power source jumper	A jumper cable to supply control power source to adjacent modules.
<b>U</b>	Motor power source connector	A connector to supply motor power source from 48 VDC power source to the linear module.
	Motor power source jumper	A jumper cable to supply motor power source to adjacent modules.
	Motor power source jumper (for 1000 mm module relay)	A jumper cable to relay motor power source in 1000 mm module.  When 3 to 4 robot sliders stop in 1000 mm module, remove this motor power source jumper, and connect the power source device for additional motor with the motor power source connector.
	YQLink cable	A communication cable between each linear module cluster and the controller. As shown in the above figure, connect from left to right with one line.  Connect the YQLink end connector to the terminal of the end cluster.
PS-1000W (DC48V)	48 VDC power supply	General-purpose 48 VDC power source device that can be applied to both control and motor operations.  With one power source device, 10 m module control power source can be supplied.  Also, one power source device can supply motor power source of two robot sliders.  Prepare power source devices for each control power source and motor power source.
	Flexible power cable for movable module	Flexible cable to supply power source to the module that performs reciprocal operation mainly in the circulation part.

A project file for LCMR200 that moves a single-axis robot and LCMR200 as a positioner via field network from the host PLC.

What is a standard profile

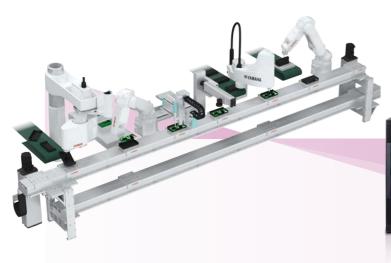



Features of YHX standard profile

- > Eliminates writing ladder logic codes.
- > Adding operation through a pendant.
- > Perform simple direct value operation and specific point-to-point move.
- > Servo ON of any slider individually.
- > Obtain alarm information through the host PLC.



Significant reduction of launching man-hour.

Significant reduction of startup time and process.


Controlled by program creation of the host PLC.

Numbers of improvements in line design and operation.

Implementing a task is simple and easy


#### POINT LCMR200 can be operated using your familiar PLC.

Use of YHX standard profile makes it possible to operate the LCMR200 from the host unit such as PLC via the I/O interface of each field work.

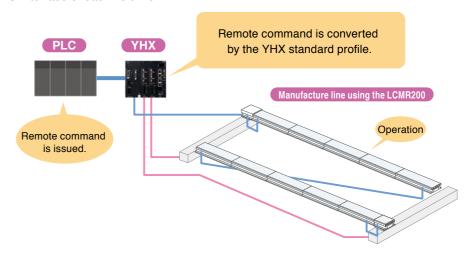

#### POINT Creation of YHX ladder by the customer is not needed.


Dedicated input and output signals are already assigned to the word and bit area of the field network. Operations necessary for the robot motion such as servo ON or JOG movement can be performed without creating programs.

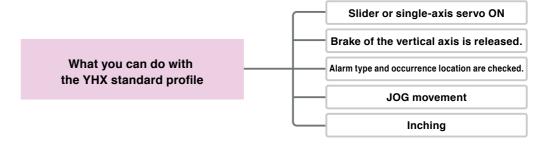

#### POINT Control using "movement file"

Control is performed using the point data "movement file" necessary to register the target position.



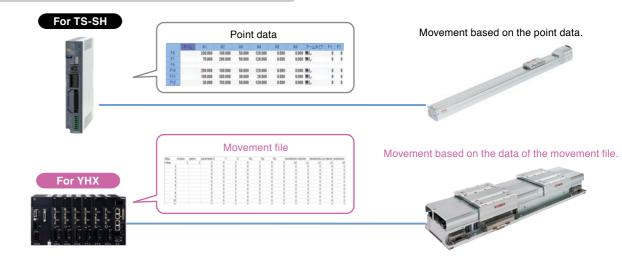

- · The operation pattern for up to 65,535 points in total can be designated.
- · The coordinate value, speed, acceleration, deceleration, and tolerance are specified for each point.

Point	coordinate value (mm)	Speed	Acceleration	Deceleration	Tolerance (mm)
1	100.000	1	0.5	1	0.01
2	823.500	0.5	1	1	0.05
3	472.000	1	1	1	0.02
4	1834.410	0.5	1	1	0.01
5	2755.350	1	1	1	0.01

#### Overview of remote command

Input
1. Command
2. Point designation
3. Direct value position
designation

3. Current position output

1. Axis status

2. Point output

2. Point number to be used. 3. When the direct value is designated,

JOG, inching, etc.

- the speed and acceleration use the values stated in 2 and only.
  - 1. Servo status, during movement, or movement completion, etc.
    - 2. Point number during movement

1. Servo ON, return-to-origin, movement,

3. Current position is always output.


P10 P11



Point designation operation

- · Next movement point number for each slider is designated.
- · This operation is valid when each slider needs to be circulated to the predetermined stop position.

Point	coordinate value (mm)	Speed	Acceleration	Deceleration	Tolerance (mm)		Step		Slider			
(10).	500.0	1	0.5	1	0.01			#01	#02	#03		
11	1250.0	0.5	1	1	0.05		1	P10	-	-		
12	2000.0	1	1	1	0.02		2	P11	P10	-		
13	2750.0	0.2	1	1	0.01		3	P12	P11	P10		
			•				4	P13	P12	P11		
	peration condi and acceleration				eed,	•	(	Point number i	s assigned to t	he slider.		
						_		_				

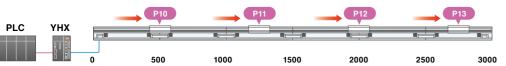

#### **Direct value operation**

- · The operation conditions such as speed are specified by the points and the target coordinates are directly specified by the numeric values.
- · This operation is valid when each slider position is managed by the PLC or when the stop position needs to be changed as required.

Point	coordinate value (mm)	Speed	Acceleration	Deceleration	Tolerance (mm)			S	lider#01		Blider#02	S	ider#03
10		1	0.5	1	0.01		Step	Point	coordinate value (mm)	Point	coordinate value (mm)	Point	coordinate value (m
11	Specified	0.5	1	1	0.05	•	1	P10	500.0	-	-	-	-
12	separately	1	1	1	0.02	•	2	P11	1250.0	P10	510.0	-	-
13		0.2	1	1	0.01		3	P12	2000.0	P11	1260.0	P10	500.0
							4	P13	2750.0	P12	2010.0	P11	1250.0
The operation conditions are registered for the points and the target coordinates are specified separately.  Operation conditions: Registered point is referred to. + Target position: Directly specified by the numeric values.													
	ad by the DLC												
	ed by the PLC.		500	)	125	50	$\rightarrow$	2000	$\rightarrow$	2750			

#### POINT 6 JOG or inching operation can be performed from the pendant even when no PLC is connected.


Even in a status where no PLC is connected, the axis can be operated using the JOG or inching operation from the programming pad.


When the LCMR200 is used for the circulation layout, the necessary adjustment work can be performed immediately.

#### POINT® Prevention of operation leading to damage to the circulation section is supported.

Registering the pallet size to the parameter determines the slider operable area. Even when a pallet or workpiece is larger than the overall length of the slider, a circulation operation failure can be detected.

This avoids any slider transfer accident of the circulation unit and allows for safer software design.

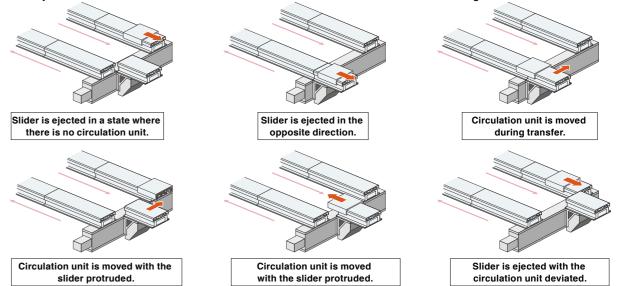

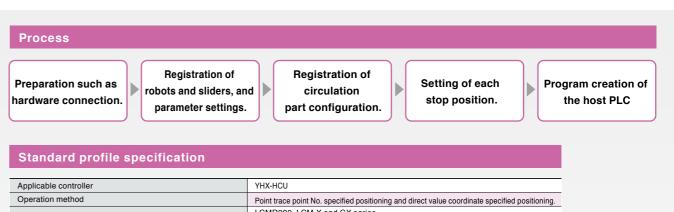

Applicable controller		YHX-HCU			
Operation method		Point trace point No. specified positioning and direct value coordinate specified positioning.			
Comparative robot		LCMR200, LCM-X and GX series (LCMR200 and LCM-X cannot be controlled together).			
Interface		YHX Studio, YHX-PP, and field network communication			
Operation type		Absolute position moving			
Maximum number of points that can be	registered.	65535			
No. of control axes	EtherCAT	64			
No. of control axes (Total of sliders and single-axis	EtherNet/IP™	64			
robots, however, up to 16 axes for single-axis robot)	PROFINET	64			
ioi sirigie-axis robot)	CC-Link	22			
	All axes target input	Servo ON/OFF switch/Interlock/Alarm reset			
	All axes target output	Servo State/Interlock State/Alarm State/Heart beat/Emergency stop State			
Main input and output See the manual for other functions.	Individual axis target input	Servo ON/OFF switch/Return to Origin/Positioning moving inside the control range (including LCM relay operation)/Slider insertion preparation from outside the control range/Slider discharge to outside the control range/ Jog movement, inching movement/Movement Stop			
	Individual axis target output	Servo State/Return to origin State/Output specified point No. for various execution state display/Current position/Axis alarm State			
	·	Writing/reading of setting data			
Main remote command See the manual for other remote comma	ande	Alarm check			
Oce the manual for other remote commit	ilius.	Writing and reading of integrated running distance and No of transits.			

## Basic specifications of LCMR200


#### Basic specifications of LCMR200

D: 0.1				
Drive method		Linear motor with moving magnet type core		
Position Search		Magnetic absolute position sensor		
Maximum payload		15 kg		
Maximum speed		2,500 mm/sec *1		
Repeatability		+/-5 μm		
Mechanical tolerance be	etween robot sliders	+/-30 µm (Dowel hole standard)		
Total stroke limit		25.5 m *2		
Maximum number of rob	oot sliders	64 units *2		
Minimum spacing between	en robot sliders	210 mm <sup>*3</sup>		
	Max. external size of frame cross-section	W175 × H109 mm (Including robot slider)		
Main frame dimensions	Linear module length	200 mm / 300 mm / 500 mm / 1000 mm		
	Robot slider length	198 mm		
Weight	Linear module	Approx 20 kg (Per 1 m of linear module)		
vveigni	Robot slider	2.4 kg		
Power supply	Control power supply	48 VDC Required power [W] = 75 [W/m] x Overall length of module [m] '4		
. с. с. сорр. у	Motor power supply	48 VDC Yamaha's designated model '5		
	Operating temperature	0 °C to 40 °C *6		
Operating environment	Storage temperature	-10 °C to 65 °C		
	Operating humidity	35 % to 85 %RH [No condensation]		
Controller		YHX controller *7		

- \*1. When the conveying weight exceeds 10 kg, it will drop to 2,000 mm/sec according to the weight
- \*2. It may differ depending on the system configuration.
- \*3. When the jig palette to equip to the robot slider is longer, it shall be the jig palette length + 10 mm.
- \*4. The option 600 W power source supplies the power to the linear module with a length of up to 8 m while the 1000 W power source supplies the power to the linear module with a length of up to 13.3 m.
- \*5. The option power source can supply the power to up to two robot sliders.
- (When AC 200 to 240 V is input.)
- \*6. Operate LCMR200 in the temperature environment (+/-5 °C) that installation and adjustment were performed.
- \*7. The YHX controller requires a separate electrical power supply.

#### Static loading moment


Static loading moment [N·m]								
MP	MY	MR						
47.0	35.7	31.4						

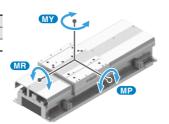

#### Allowable overhang

payload [kg]	Allowable overhang [mm]							
[kg]	Α	В	С					
5	760	405	239					
10	762	231	158					
15	700	173	122					

\* Distance from center of slider top to center of gravity of object being carried at a guide service life of 10,000 km.

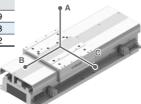

## Allowable Load of LCMR200

Allowable load in the moving direction of slider is always 28 N regardless of the loading position.



#### Payload: Common up to 15 kg.

Loading Position	Loading Position Z [mm]							
X [mm]	0	20	40	60	80	100		
0	611	514	443	390	348	314		
20	517	445	391	349	315	287		
40	447	393	350	316	288	264		
60	394	352	317	289	265	245		
80	353	318	289	266	245	228		
100	319	290	266	246	229	214		

#### **Load: Vertical Direction**



Loading Position	Loading Position Y [mm]							
X [mm]	0	20	40	60	80	100		
0	924	687	546	453	387	339		
20	760	593	485	411	356	314		
40	647	521	436	375	328	293		
60	562	465	396	345	305	274		
80	498	420	362	319	285	258		
100	446	382	335	297	268	243		

#### Payload: 10 kg

Loading Position	Loading Position Y [mm]								
X [mm]	0	20	40	60	80	100			
0	874	650	517	429	367	320			
20	721	561	459	389	337	297			
40	613	493	413	355	311	277			
60	533	440	375	327	289	260			
80	471	397	343	303	270	244			
100	423	362	317	282	254	231			

#### Pavload: 15 kg

Loading Position	Loading Position Y [mm]					
X [mm]	0	20	40	60	80	100
0	826	614	488	406	347	303
20	680	529	433	367	318	281
40	578	466	390	335	294	261
60	503	416	354	309	273	245
80	445	375	324	285	255	231
100	399	342	299	266	239	217

Unit: [N]

## Configuration parts of LCMR200

#### LCMR200 Main Body Linear module Front\* cable extraction Rear\* cable extraction Length Model 200mm LCMR200-F2 LCMR200-B2 300mm LCMR200-F3 LCMR200-B3 LCMR200-F5 500mm LCMR200-B5

LCMR200-F10

LCMR200-B10

- \* The direction for the order of the driver numbers
- The motor power source connector is attached to the module

Robot slider		No.
Model	LCMR200-XBOT-****	4
Parts No.	KNA-M2264-**	

When ordering the robot slider, specify slider ID number 1001 to 1139 in the last 4 digits "\*\*\*\*" section of the model.

ID, m			
ID	Model	Parts No.*	
1001	LCMR200-XBOT-1001	KNA-M2264-01	
1002	LCMR200-XBOT-1002	KNA-M2264-02	
1099	LCMR200-XBOT-1099	KNA-M2264-99	ID 110s are A*.
1100	LCMR200-XBOT-1100	KNA-M2264-A0	ID 111s are B*. ID 112s are C*.
1112	LCMR200-XBOT-1112	KNA-M2264-B2	ID 112s are D*.

#### YQLink cable

1000mm

#### YQLink movable cable

This cable connects the controller (YHX) and linear conveyor module. Refer to the system configuration drawing for a connection example.



YQLink fixation	cable	
Cable length	Model	Parts No.
15m	VUV VOL M15M	KNIV WESES EU

YQLink terminating connector		or
Model		Parts No.
	YHX-YQL-TC	KFA-M5361-00

#### Other power source options

#### Module electric power supply (48 VDC-1000 W)

Unit type general purpose power supply corresponding to the peak output that is applicable to both the module control and motor power. Select a power supply suitable for the required power and equipment installation conditions by considering the supply capacity and outside dimensions per application of each power supply.



LCM-XCU-PS-1000W PS-48V-600W

- Rated output 600 W/1000 W, Efficiency > 80%, Power factor > 90%
- When AC 200 to 240 V is input, the peak maximum output is 42 A (within 5 seconds)

Supply	capacity		
Control power supply [Rated output]	Motor power supply [Peak maximum output]	Model	Parts No.
Cluster within 8m [600W]	Within 2 sliders [1992W]	PS-48V-600W	KNA-M6561-00
Cluster within 13.3 m [1000W]	Within 2 sliders [2016W]	LCM-XCU-PS-1000W	KFA-M6561-00

Flexible power cable for movable module		
	Model	Parts No.
	LCMR200-PJ-R2M	KNA-M539H-21

#### **LCMR200 Connection Parts**

Module conne	ection kit	0
Model	Parts No.	Configuration parts
LCMR200-CKIT	KNA-M2043-C0	Connection unit Connection plate Motor power source jumper Control power source jumper

Module termi	nal kit*	
Model	Parts No.	Configuration parts
LCMR200-EKIT	KNA-M2043-E0	End unit ×2 End plate ×2 Control power supply connector

When a circulation unit made by Yamaha is not used, one terminal kit is necessary for one cluster. The components for two terminal kits are assembled to or supplied with Yamaha circulation unit.

Adjuster kit*		
Model	Parts No.	Configuration parts
LCMR200-AKIT	KNA-M2043-A0	Connection unit Adjuster plate Motor power source jumper Control power source jumper
Return line lene	ath Number of a	* For the return line, use the

Return line length	Number of adjuster kit
3 m or less	1
More than 3 m and 14 m or less	2
ore than 14 m and 25.5 m or less	3

according to the return line For details about the usage location and how to use, see the user's manual.

#### Maintenance items\*

#### Control power supply connector Model Parts No. LCMR200-CPC KNA-M4431-00

Control power source jumper	
Model	Parts No.
LCMR200-CPJ	KNA-M4421-10

#### Motor power source connector Model Parts No. LCMR200-MPC KNA-M4432-00

Motor power source jumper	
Model	Parts No.
LCMR200-MPJ	KNA-M4422-10
LCMR200-MP IS (for 1000 mm module relay)	KNA-M4422-20


End plate	45
Model	Parts No.
LCMR200-EP	KNA-M22GM-E0
	*55
Connection plate	
Model	Parts No.
LCMR200-CP	KNA-M22GM-C0

Adjuster plate	-
Model	Parts No.
LCMR200-AP	KNA-M22GM-A0

End unit	
Model	Parts No.
LCMR200-EU	KNA-M2040-E0


Connection unit	
Model	Parts No.
LCMR200-CU	KNA-M2040-C0


<sup>\*</sup>These are single models of parts included in the module connection kit, adjuster kit, module terminal kit, circulation unit, or module main body.

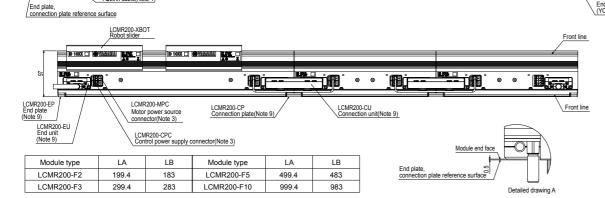


Front\* cable extracti Linear module

# LCMR200-F2 8-φ6.2 through-hole φ10 spot facing depth 5.2(Note 10) 24.7 50 50 50

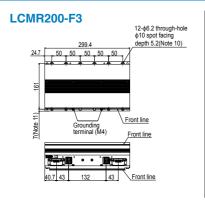

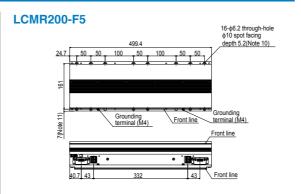

#### LCMR200-F10

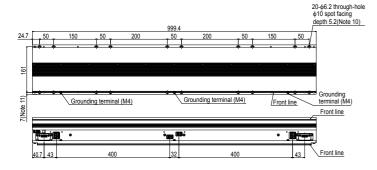

- Note 1. The robot slider unstoppable range of 99 mm from both ends of the cluster may vary depending on the pallet length. However, when there is no adjacent cluster, the robot slider unstoppable range is 90 mm regardless of the pallet length. For details, see the manual.
- Note 2. Module types can be freely combined within the same cluster after the front and rear of the cable extraction direction have been aligned.

  Note 3. The control power source and motor power source can be passed and received
- by the jumper connector. See the manual for detail of passing and receiving.
- For the YQLink cable and YQLink terminating connector connection location,
- Note 5. Sixty-four robot sliders can be installed in a system connected by the YQ Link
- cables \* (depending on the number of robots that are controlled by the same
- controller).

  Note 6. Where modules are connected with the connection plate, the clearance between the adjacent modules is 0.6 mm.
- The minimum pitch of each slider at the stopping state is 210 mm; however, when they start at the same time, they may collide due to operation conditions, and conditions such as command timing from the upper PLC, programming with YHX, etc. In the case, it is necessary to adjust by securing more distance (pitch)
- between the sliders, changing the start timing (sequential start), etc.


  Note 8. There is no mechanical stopper due to the nature of the product. Please install a mechanical stopper by the customer as needed.
- Note 9. The connection plate and connection unit are used to connect the modules, and the end plate and end unit are used at the cluster end.
- Note 10. To secure the module, end plate, connection plate, and adjuster plate to the base, use M5 hexagon socket head cap bolts.
- Note 11. Distance from the end plate reference surface, connection plate reference surface and adjuster plate reference surface to the counterbore hole for the module clamp bolt.
- Note 12. The YQLink movable cable is used. When the YQLink fixation cable is used, the
- distance is 104 mm.

  \* It may differ depending on the system configuration.
- \* Orientation corresponds to the order of the driver numbers

#### LCMR200 Module connection and installation


Rear\* cable extraction

#### LCMR200-B\*\*

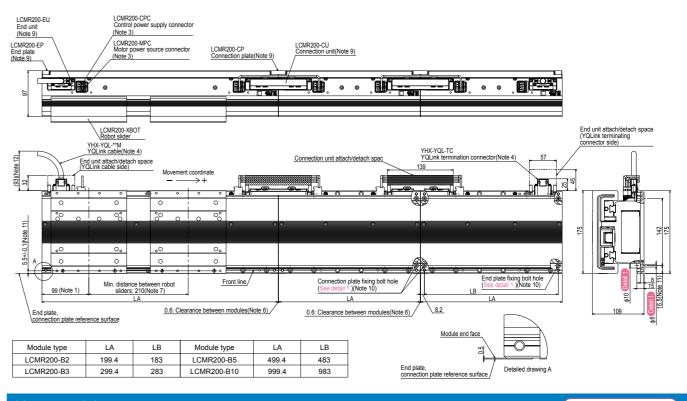


Rear\* cable extraction Linear module

#### LCMR200-B2 LCMR200-B3 40.7\_43 132 Grounding terminal (M4) -----\*\*\*\* 50 50 50 50 50 50 50 50 Front line Front line 12-φ6.2 through-hole φ10 spot facing depth 5.2(Note 10)

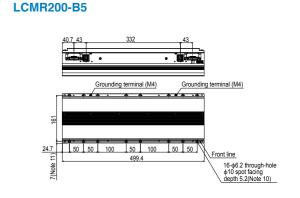

#### LCMR200-B10

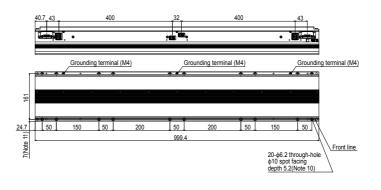

- Note 1. The robot slider unstoppable range of 99 mm from both ends of the cluster may vary depending on the pallet length. However, when there is no adjacent cluster the robot slider unstoppable range is 90 mm regardless of the pallet length. For details, see the manual.
- Note 2. Module types can be freely combined within the same cluster after the front and rear of the cable extraction direction have been aligned.

  Note 3. The control power source and motor power source can be passed and received
- by the jumper connector. See the manual for detail of passing and receiving.
- For the YQLink cable and YQLink terminating connector connection location, see the manual.
- Note 5. Sixty-four robot sliders can be installed in a system connected by the YQ Link
- cables \* (depending on the number of robots that are controlled by the same controller).


  Note 6. Where modules are connected with the connection plate, the clearance between
- the adjacent modules is 0.6 mm.
- The minimum pitch of each slider at the stopping state is 210 mm; however, when they start at the same time, they may collide due to operation conditions, and conditions such as command timing from the upper PLC, programming with YHX, etc. In the case, it is necessary to adjust by securing more distance (pitch)
- between the sliders, changing the start timing (sequential start), etc.


  There is no mechanical stopper due to the nature of the product. Please install a mechanical stopper by the customer as needed.
- Note 9. The connection plate and connection unit are used to connect the modules, and the end plate and end unit are used at the cluster end.
- Note 10. To secure the module, end plate, connection plate, and adjuster plate to the base, use M5 hexagon socket head cap bolts.
- Note 11. Distance from the end plate reference surface, connection plate reference surface and adjuster plate reference surface to the counterbore hole for the module clamp bolt.
- Note 12. The YQLink movable cable is used. When the YQLink fixation cable is used, the
- distance is 104 mm.


  \* It may differ depending on the system configuration.
- \* Orientation corresponds to the order of the driver numbers.


22

## External view of LCMR200

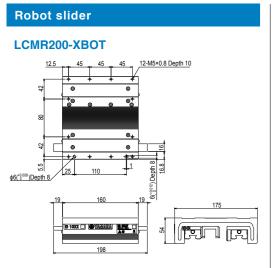


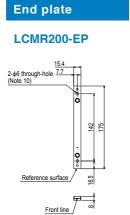

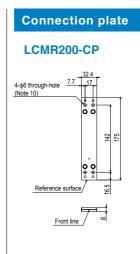


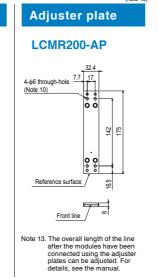

# Module electric power supply (DC48V-600W) PS-48V-600W

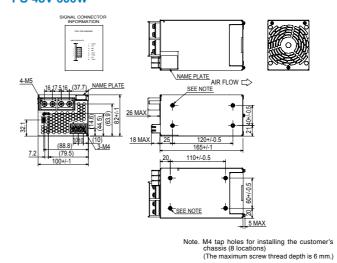




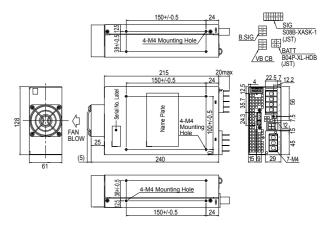

#### End unit

#### LCMR200-EU

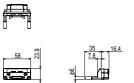



#### YQLink movable cable


Within ☐ Cable length

0.3 0.3m

LCMR200-PJ-R2M

#### YHX-YQL-R□M (Only 10 m for R10M-N)


3	3m			
7	7m			
10	10m			
	<b>+</b>		L	
(13.6)	< (39)	(60) > (35) >		
	I I			

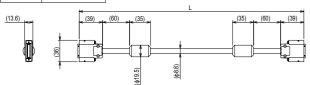

Flexible power cable for movable module


#### **Connection unit**

#### LCMR200-CU

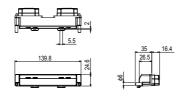


#### YQLink fixation cable

#### YHX-YQL-M15M

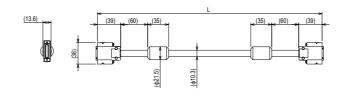


# Control power supply connector / Motor power source connector LCMR200-CPC/LCMR200-MPC

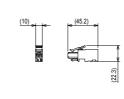

#### **Circulation unit Order model**

V4: Front of axis/Above motor V6: Front of axis/Above motor/Folding

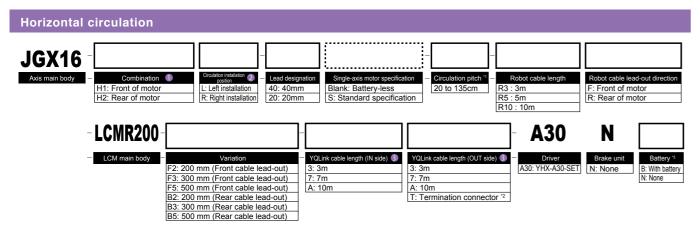


## Vertical circulation JGX16 : Front of motor 2: Rear of axis/Under motor 3: Rear of axis/Above motor/Folding


LCMR200-		-			-	A30	V	
LCM main body	Variation	-	YQLink cable length (IN side) 3	YQLink cable length (OUT side) 3	-	Driver	Brake unit	Battery *3
	F2: 200 mm (Front cable lead-out)	] [	3: 3m	3: 3m	A3	0: YHX-A30-SET	V: With brake unit	B: With battery
	F3: 300 mm (Front cable lead-out)	П	7: 7m	7: 7m	_			N: None
	F5: 500 mm (Front cable lead-out)	П	A: 10m	A: 10				
	B2: 200 mm (Rear cable lead-out)			T: Termination connector *2	]			
	B3: 300 mm (Rear cable lead-out)		*1 Cautio	ons on circulation pitch				
	B5: 500 mm (Rear cable lead-out)			pitcii cui ationi pitcii				

- \*1 Cautions on circulation pitch
- . Specify the same distance as that between the forward and backward movements of the equipment for the crculation pitch.
- The transfer cannot be stopped at a location other than the specified circulation pitch.
- After delivery, the customer cannot adjust the circulation pitch.
- The circulation pitch is selected at increments of 5 cm.
- \*2 The termination connector can be selected only when the circulation installation position is R (right installation).

\*3 When the battery-less motor is selected, no battery is needed.

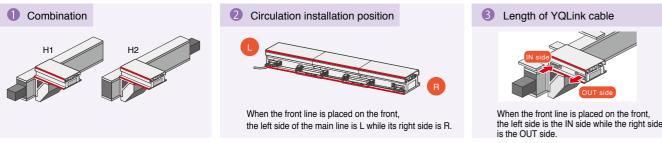

■The left and right are reference when the front line of the module is placed on the front. ■ The front and rear are the front line reference of the module.

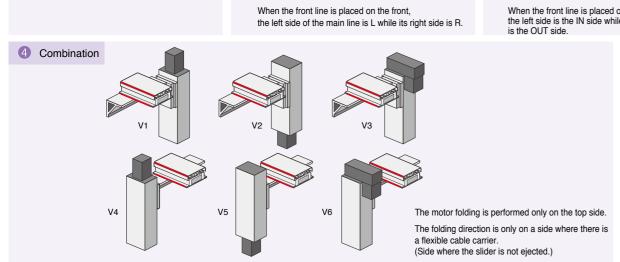

<sup>\*</sup> All illustrations shown above use the circulation installation position R (right installation).

## **Circulation unit Basic specifications**

#### JGX16-H Basic specifications

#### JGX16-H Basic specifications

Axis configuration	Junctio	on axis	LCMR200 *1	
Motor output	80□/	750W	-	
Repeated positioning accuracy	+/- 0	.005	+/- 0.005	
Speed reduction mechanism/drive method	Grinding ball screv	ν φ20 (C5 grade)	Linear motor with moving magnet type core	
Ball screw lead	40mm 20mm		-	
Maximum speed "2	2400mm/sec 1200mm/sec		2500mm/sec	
Circulation pitch/linear module length	200 to 1350 mr	n (50 mm pitch)	200, 300, 500	
Position detection	Magnetic type absolut	e position sensor *3	Magnetic type absolute position sensor	
Operating temperature	0°C to 40°C '4			
Controller	YHX controller			

- \*1: For details about the specifications, see P.20.
- \*2: The maximum speed may not be reached depending on the operating range.
- \*3: The circulation transfer position only
- \*4: The operation is performed at an environmental temperature (+/-5 °C) at which the installation and adjustment have been performed.

#### JGX16-H Maximum payload per robot slider


	-				
Linear module length		200	300	500	
Number of robot slider simultaneous circulations		1	1	1	2
Dell consulted 21	40mm	15	15	15	12
Ball screw lead '1	20mm	15	15	15	15

\*1: Note that the optimal lead length may vary depending on the operating environment.

#### JGX16-H Allowable overhang amount\*

Overhang direction	A direction	B direction	C direction *2	
Number of robot slider simultaneous circulations		1 or 2	1 or 2	1 or 2
	5kg	760	405	239
Payload	10kg	762	231	158
	15kg	700	173	122

- \*1 Distance from the center of the top surface of the robot slider to the center of gravity of the load.
- \*2 Be aware that the robot sliders do not interfere with each other between the main lines

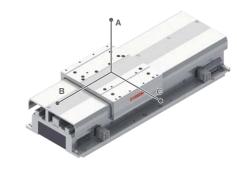

#### **JGX16-V Basic specifications**

#### IGY16-V Racic enecifications

Axis configuration	Junctio	on axis	LCMR200 *1		
Motor output	80□/	750W	-		
Repeated positioning accuracy	+/- 0	.005	+/- 0.005		
Speed reduction mechanism/drive method	Grinding ball scree	w φ20 (C5 grade)	Linear motor with moving magnet type core		
Ball screw lead	20mm	10mm	-		
Maximum speed *2	1200mm/sec 600mm/sec		2500mm/sec		
Circulation pitch/linear module length	300 to 600 mm	(50 mm pitch)	200, 300, 500		
Position detection	Magnetic type absolut	te position sensor *3	Magnetic type absolute position sensor		
Operating temperature	0°C to 40°C '4				
Controller	YHX controller				

- \*1: For details about the specifications, see P.20.
- \*2: The maximum speed may not be reached depending on the operating range.
- \*3: The circulation transfer position only
- \*4: The operation is performed at an environmental temperature (+/-5 °C) at which the installation and adjustment have been performed.

#### JGX16-V Maximum navload per robot slider

TODATO V INICATION PROJUCT						
Linear module length 200 300 500						
Number of robot slider simultaneous circulations		1	1	1	2	
Ball screw lead *1	20mm	15	15	15	10	
24 co. c	10mm	15	15	15	15	

<sup>\*1:</sup> Note that the optimal lead length may vary depending on the operating environment.

JGX16-V Allowable overhang amount *1									
Overhang direction	ı	A direction *2	B direction	C dire	ection				
Number of robot slider simultaneous	1 or 2	1 or 2	1	2					
	5kg	380	405	150	150				
Payload	10kg	380	231	150	100				
	15kg	380	173	122	50				

\*1 Distance from the center of the top surface of the robot slider to the center of gravity of the load.

\*2 When this unit is inserted or ejected to or from the lower stage line, the pallet height needs to be "circulation pitch - 220 mm" or less.




## **Circulation unit Basic specifications**

#### Transferrable pallet size list \*1

	0:	Linear module	Р	allet length [mr	n]	ı	Pallet width [mn	Dellas hadabs formal		
	Circulation unit	length		В	A+B	С	D	C+D	Pallet height [mm]	
		200	99	99	198					
	JGX16-H	300	199	199	298	1	Not restricted. *2		Not restricted. *2	
Recommended size		500	399	399	498	]				
when one slider circulates.		200	99	99	198					
	JGX16-V	300	199	199	298	150	150	300	Circulation pitch - 220 mm	
		500	399	399	498					
		200	99	99	198					
	JGX16-H	300	199	199	398	N	Not restricted. *2		Not restricted. *2	
Maximum size		500	399	399	798	]				
when one slider circulates.		200	99	99	198					
	JGX16-V	300	199	199	398	150	150	300	Circulation pitch - 220 mm	
		500	399	399	798	]				
		200		Unavailable.			Unavailable.		Unavailable.	
	JGX16-H	300		Ullavallable.			Uriavaliable.		Ullavallable.	
Maximum size		500	145 <sup>'3</sup>	145 *3	244 *3	l N	Not restricted. *2		Not restricted. *2	
when two sliders circulate.		200		Linavailable			Linavailabla		Linavailable	
	JGX16-V			Unavailable.			Unavailable.		Unavailable.	
		500	145 *³	145 *3	244 *3	150	150	300	Circulation pitch - 220 mm	

- \*1: The pallet size indicates the total size of the loads on the robot slider including the customer's workpieces. In addition, it is assumed that all pallets on the robot sliders have the same shape.
- For the horizontal circulation method, be aware that pallets or workpieces on the robot sliders that pass each other on the outbound and inbound routes do not collide with each other.
- \*2: The allowable overhang amount must not be exceeded. Be aware that the robot sliders do not collide with each other between the main lines.
- \*3: When either A or B is 122 mm or more, the pallet cannot be arranged at the center of the robot slider. It is assumed that all pallets on the robot sliders have the same shape.

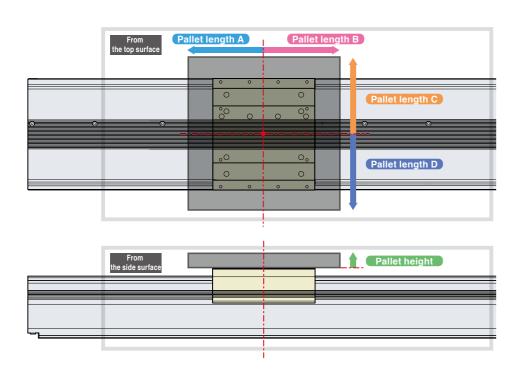

## **Circulation unit Options**

#### JGX16 circulation accuracy measuring jig


Using this jig improves the workability when the following is measured.

- · Teaching accuracy of the transfer section when YAMAHA genuine circulation unit is used.
- · Accuracy of the transfer section when the circulation part designed by the customer is used.
- · Installation accuracy of linear modules that are connected with the adjuster plate.


	YAMAHA horizontal circulation for JGX16-H	YAMAHA vertical circulation for JGX16-V	For circulation designed by the customer
Part number	S02J-M5360-202	S02J-M5360-102	S02J-M5360-004

W Approx. 250 mm x D Approx. 300 mm W Approx. 250 mm x D Approx. 300 mm W Approx. 250 mm x D Approx. 300 mm Outside dimensions x H Approx. 150 mm x H Approx. 130 mm x H Approx. 150 mm Main body and measuring instrument are attached.) Main body weight Approx. 3.2 kg Approx. 3.4 kg Approx. 4.0 kg (Measuring instrument is attached.)


#### YAMAHA horizontal circulation for JGX16-H (S02J-M5360-202)

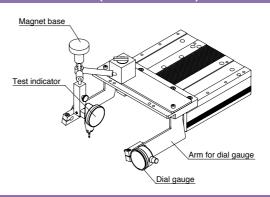

# For circulation designed by customer (S02J-M5360-004)

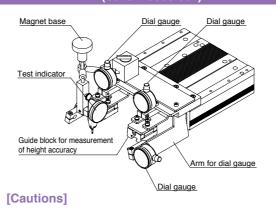

#### YAMAHA vertical circulation for JGX16-V (S02J-M5360-102)

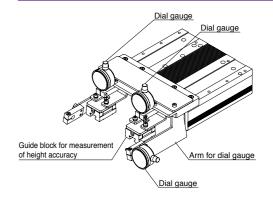



- · A (Side where there is front line.): Maintain at least 60 mm from the slider end.
- · B: Maintain at least 100 mm from the top of the slider.

If above spaces cannot be maintained, any part of the measuring jig may interfere with a peripheral device on the equipment side.

Therefore, the measuring jig cannot be used on the linear module.

In addition, use the linear module on the reference side with a length of 300 mm or more.

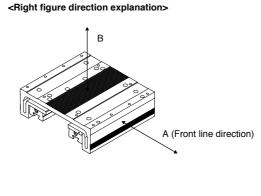


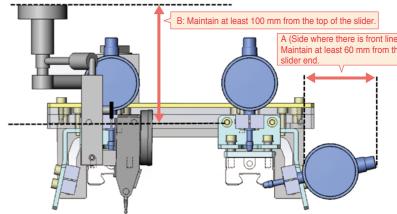



#### Horizontal circulation


#### JGX16-H1L/H2L

JGX16-H1L JGX16-H2L

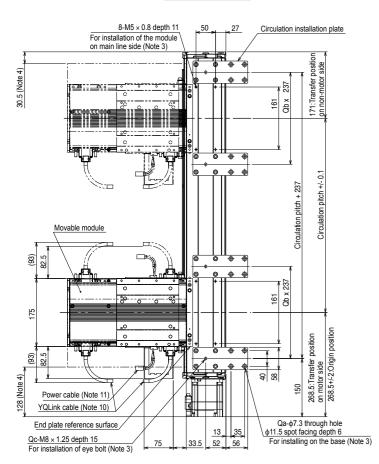

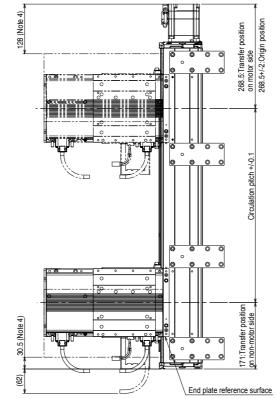

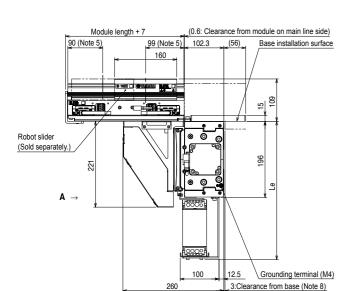

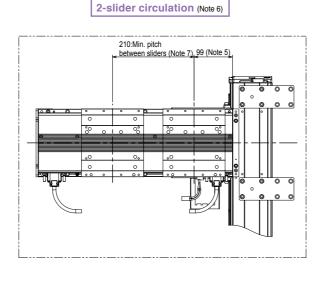

Note 1. For details about the installation and operation procedures, see the user's manual.

Note 2. The user wiring cannot be passed through the flexible cable carrier.

Note 3. Do not use the installation hole at each location for an application other than that specified.

Note 3. Do not use the installation note at each location for an application other than that specified.

Note 4. Movable module position when the junction axis is stopped by the mechanical stopper.

Note 5. Robot slider unstoppable range from the module end.

An unstoppable range of 99 mm on the main line side may vary depending on the pallet length.

For details, see the Manual.

Note 6. Two-slider simultaneous circulation can be performed only when the movable module is 500mm-module.

Note 7. When the pallet length is 200 mm or more, this pitch is "pallet length + 10 mm".

However, when two sliders start at the same time, the minimum pitch is 250 mm or "pallet length + 50 mm".

Note 8. Reference value for installation of the base. Install the circulation unit so that it is not in contact with the base end.


Note 9. The robot cable fixing R is R30. The lead-out direction may vary depending on the specifications.


Note 10. The YQLink cable fixing R is R55. This cable may become the termination connector depending on the specifications.

Note 11. The power cable fixing R is R55.

Note 12. The weight of the main body is a reference value. The weights of the module and robot slider are not included.

Circulat	ion pitch	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100	1150	1200	1250	1300	1350
L	_a	639.5	689.5	739.5	789.5	839.5	889.5	939.5	989.5	1039.5	1089.5	1139.5	1189.5	1239.5	1289.5	1339.5	1389.5	1439.5	1489.5	1539.5	1589.5	1639.5	1689.5	1739.5	1789.5
L	_b	542.5	592.5	642.5	692.5	742.5	792.5	842.5	892.5	942.5	992.5	1042.5	1092.5	1142.5	1192.5	1242.5	1292.5	1342.5	1392.5	1442.5	1492.5	1542.5	1592.5	1642.5	1692.5
L	_C	196.5	253.5	307.5	60.5	85.5	171.5	196.5	251.5	306.5	361.5	416.5	471.5	496.5	553.5	607.5	360.5	385.5	471.5	496.5	551.5	606.5	661.5	716.5	771.5
L	_d	300	300	300	601	601	601	601	601	601	601	601	601	601	601	601	902	902	902	902	902	902	902	902	902
L	_e	356	356	356	356	356	356	356	356	356	356	356	356	356	366	366	366	366	366	366	366	366	366	366	366
C	Qa	8	8	8	8	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16
C	Qb	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
(	Qc	2	2	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
Weight	(Kg) <sup>Note 12</sup>	27.6	28.7	31.7	33.6	34.7	35.8	37	38.1	39.3	40.4	41.6	42.7	43.9	45	46.2	48.1	49.3	50.4	51.6	52.7	53.9	55	56.2	57.3
Maximum	Lead 40							2400							2160	1920	1680	1440	1320	1200	1080	96	60	840	720
speed	Lead 20							1200							1080	960	840	720	660	600	540	48	30	420	360
(mm/sec)	Speed setting							-							90%	80%	70%	60%	55%	50%	45%	40	)%	35%	30%

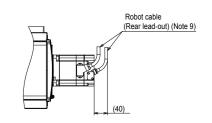

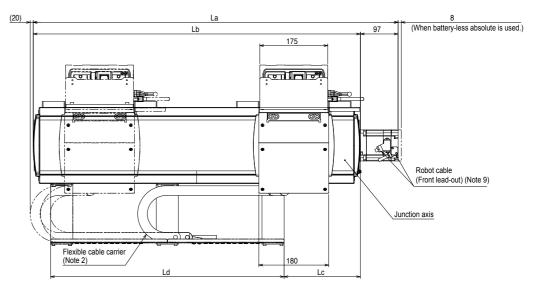


View A

#### Horizontal circulation


#### JGX16-H1R/H2R


JGX16-H2R

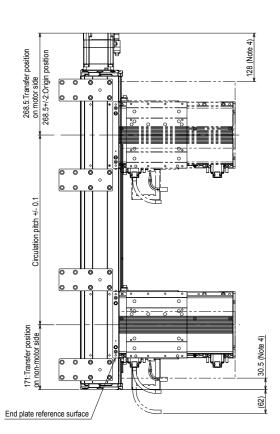

JGX16-H1R Circulation unit installation plate 8-M5 × 0.8 depth 11

For installation of the module on main line side (Note 3) Module on movable side YQLink connector (Note 10) Power cable (Note 11) YQLink cable (Note 10) Qa-\phi7.3 through hole \phi11.5 spot facing depth 6 \End plate reference surface Qb-M8 x 1.25 depth 15 For installation of eye bolt (Note 3)

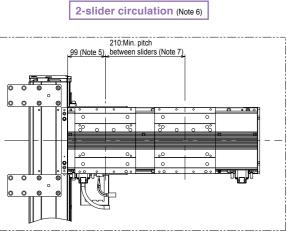

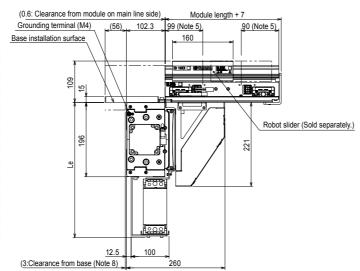

Note 1. For details about the installation and operation procedures, see the user's manual.

Note 2. The user wiring cannot be passed through the flexible cable carrier.

Note 3. Do not use the installation hole at each location for an application other than that specified.

Note 4. Movable module position when the junction axis is stopped by the mechanical stopper. Note 5. Robot slider unstoppable range from the module end.

An unstoppable range of 99 mm on the main line side may vary depending on the pallet length. For details, see the Manual.

Note 6. Two-slider simultaneous circulation can be performed only when the movable module is 500mm-module.

Note 7. When the pallet length is 200 mm or more, this pitch is "pallet length + 10 mm".

However, when two sliders start at the same time, the minimum pitch is 250 mm or "pallet length + 50 mm".

Note 8. Reference value for installation of the base. Install the circulation unit so that it is not in contact with the base end.


Note 9. The robot cable fixing R is R30. The lead-out direction may vary depending on the specifications.


Note 10. The YQLink cable fixing R is R55. This cable may become the termination connector depending on the specifications.

Note 11. The power cable fixing R is R55.

Note 12. The weight of the main body is a reference value. The weights of the module and robot slider are not included.


Circula	tion pitch	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100	1150	1200	1250	1300	1350
l	_a	639.5	689.5	739.5	789.5	839.5	889.5	939.5	989.5	1039.5	1089.5	1139.5	1189.5	1239.5	1289.5	1339.5	1389.5	1439.5	1489.5	1539.5	1589.5	1639.5	1689.5	1739.5	1789.5
l	_b	542.5	592.5	642.5	692.5	742.5	792.5	842.5	892.5	942.5	992.5	1042.5	1092.5	1142.5	1192.5	1242.5	1292.5	1342.5	1392.5	1442.5	1492.5	1542.5	1592.5	1642.5	1692.5
ı	_c	196.5	253.5	307.5	60.5	85.5	171.5	196.5	251.5	306.5	361.5	416.5	471.5	496.5	553.5	607.5	360.5	385.5	471.5	496.5	551.5	606.5	661.5	716.5	771.5
l	_d	300	300	300	601	601	601	601	601	601	601	601	601	601	601	601	902	902	902	902	902	902	902	902	902
l	_e	356	356	356	356	356	356	356	356	356	356	356	356	356	366	366	366	366	366	366	366	366	366	366	366
(	Qa	8	8	8	8	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16
(	Qb	0	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
(	Qc	2	2	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
Weight	(Kg) <sup>Note 12</sup>	27.6	28.7	31.7	33.6	34.7	35.8	37	38.1	39.3	40.4	41.6	42.7	43.9	45	46.2	48.1	49.3	50.4	51.6	52.7	53.9	55	56.2	57.3
Maximum	Lead 40							2400							2160	1920	1680	1440	1320	1200	1080	96	60	840	720
speed	Lead 20							1200							1080	960	840	720	660	600	540	48	30	420	360
(mm/sec)	Speed setting	- 90% 80% 70% 60% 55% 50% 45% 40% 40% - 90% 80% 70% 60% 55% 50% 45% 40% - 90% 60% 60% 60% 60% 60% 60% 60% 60% 60% 6					35%	30%																	

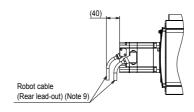


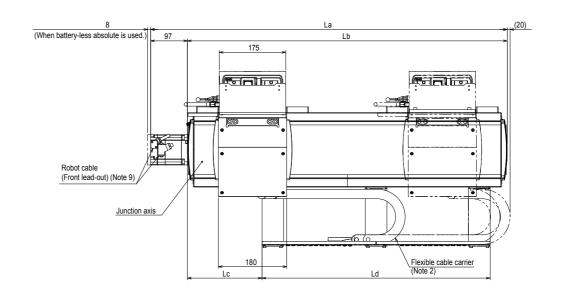



#### Vertical circulation

#### JGX16-V1L/V2L/V3L

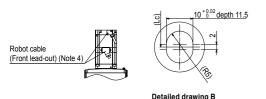

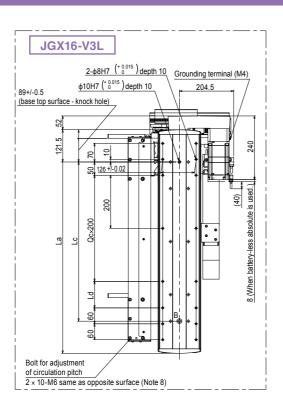

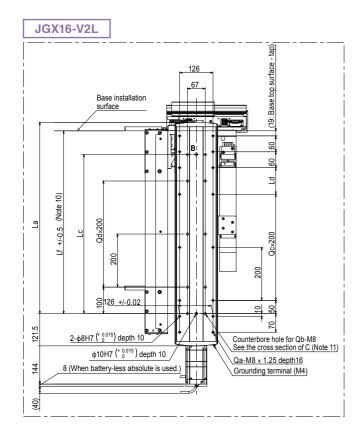

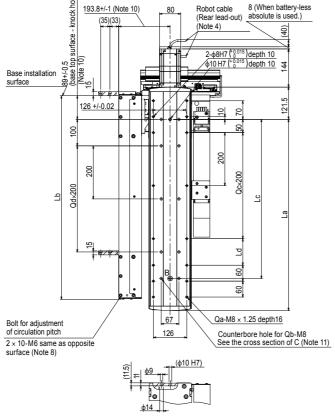


- Note 1. For details about the installation and operation procedures, see the user's manual. Note 2. The user wiring cannot be passed through the flexible cable carrier.
- Note 3. Do not use the installation hole at each location for an application other than that specified.


  Note 4. The robot cable fixing R is R30. The lead-out direction may vary depending on the specifications
- Note 5. The YQLink cable fixing R is R55. This cable may become the termination connector depending on the specifications.
- Note 6. The power cable fixing R is R55.
- The weight of the main body is a reference value. The weights of the module and robot slider are not included.
- Cross section of C Note 8. Hexagon socket head cap bolt for fine adjustment of circulation pitch.
- Maintain a work space where you can access the bolt.
- Note 9. Robot slider unstoppable range from the module end.


  An unstoppable range of 99 mm on the main line side may vary depending on the pallet length.
- For details, see the manual .


  Note 10. Design and install the base so that it is within the described tolerance.
- Note 11. When securing the unit using the installation counterbore hole (cross section of C), peel off the dust-proof seal adhered to the inside of the axis, and then install the unit.

#### 2-slider circulation (Note 15)

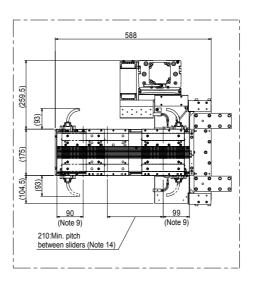

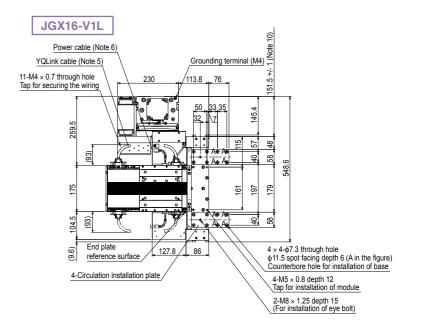

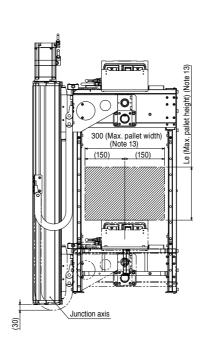

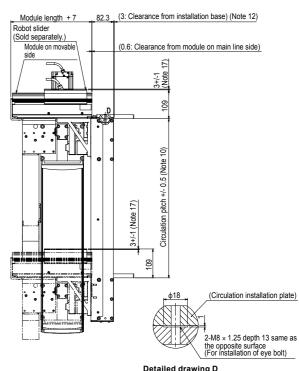

- Note 12. Reference value for installation of the base. Install the circulation unit so that it is not in contact with the base end.


  Note 13. This value may differ from the allowable overhang amount of the robot slider.
- For details about the payload and allowable overhand amount, see the LCMR200 specifications. Even when the circulation operation is performed with workpieces placed, the dimensions are restricted in the same manner.
- Note 14. When the pallet length is 200 mm or more, this pitch is "pallet length + 10 mm". However, when two sliders start at the same time, the minimum pitch is 250 mm or "pallet length + 50 mm".
- Note 15. Two-slider simultaneous circulation can be performed only when the movable module is 500mm-module.
- Note 16. The origin position is located on the motor side.


  Note 17. Slider top surface position when the junction axis is stopped by the mechanical stopper.

(For installation of eye bolt)									
		Detailed	d drawin	g D					
Circulation pitch	300mm	350mm	400mm	450mm	500mm	550mm	600mm		
La	421	471	521	571	621	671	721		
Lb	467.8	517.8	567.8	617.8	667.8	717.8	767.8		
Lc	300	350	400	450	500	550	600		
Ld	200	50	100	150	200	50	100		
Le	80	130	180	230	280	330	380		
Lf	389	439	489	539	589	639	689		
Qa	10	12	12	12	12	14	14		
Qb	6	8	8	8	8	10	10		
Qc	0	1	1	1	1	2	2		
Qd	0	1	1	1	1	2	2		
Weight (Kg)(Note 7)	47.6	49.0	50.5	52.0	53.5	55.0	56.4		

#### Vertical circulation

#### JGX16-V4L/V5L/V6L

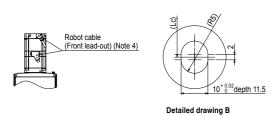


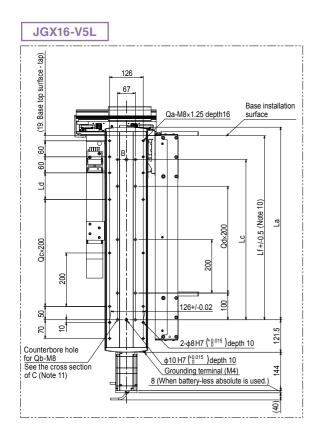


- Note 1. For details about the installation and operation procedures, see the user's manual.
- Note 2. The user wiring cannot be passed through the flexible cable carrier.
- Note 3. Do not use the installation hole at each location for an application other than that
- specimed.

  Note 4. The robot cable fixing R is R30. The lead-out direction may vary depending on the specifications.

  Note 5. The YQLink cable fixing R is R55. This cable may become the termination connector depending on the specifications.
- Note 6. The power cable fixing R is R55.
- Note 7. The weight of the main body is a reference value. The weights of the module and robot slider are not included.
- Hexagon socket head cap bolt for fine adjustment of circulation pitch.
- Maintain a work space where you can access the bolt.
- Note 9. Robot slider unstoppable range from the module end.
- An unstoppable range of 99 mm on the main line side may vary depending on the pallet length. For details, see the manual .

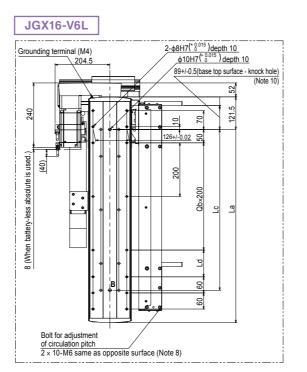

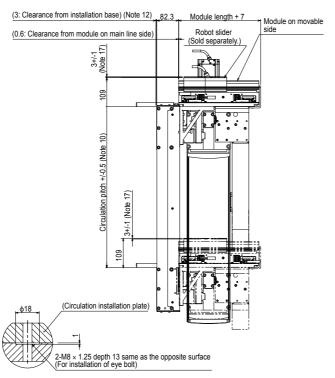

#### Detailed drawing D


- Note 10. Design and install the base so that it is within the described tolerance.


  Note 11. When securing the unit using the installation counterbore hole (cross section of C), peel off the dust-proof seal adhered to the inside of the axis, and then install the unit.


  Note 12. Reference value for installation of the base. Install the circulation unit so that it is not in contact with the base end.


- Note 13. This value may differ from the allowable overhang amount of the robot slider. For details about the payload and allowable overhand amount, see the LCMR200 specifications. Even when the circulation operation is performed with workpieces placed, the dimensions are restricted in the same manner.

  Note 14. When the pallet length is 200 mm or more, this pitch is "pallet length + 10 mm".
- However, when two sliders start at the same time, the minimum pitch is 250 mm or "pallet length + 50 mm".
- Note 15. Two-slider simultaneous circulation can be performed only when the movable module is
- Note 16. The origin position is located on the motor side.
- Note 17. Slider top surface position when the junction axis is stopped by the mechanical stopper.

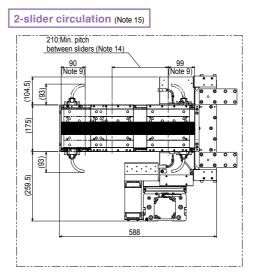

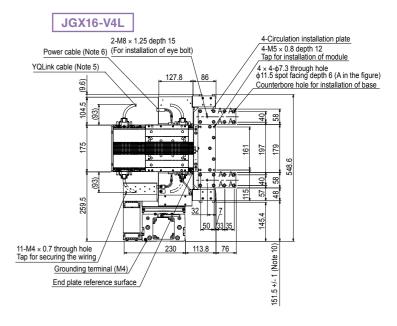

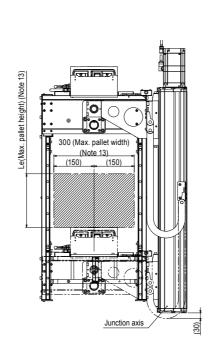

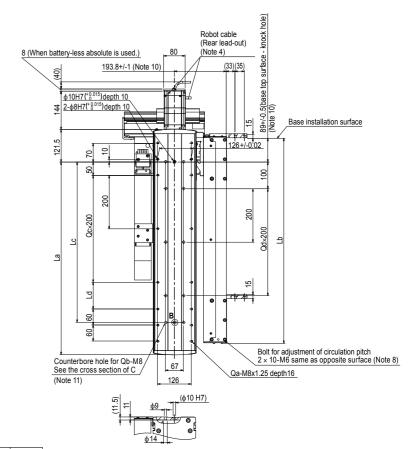


Cross section of C


Circulation pitch	300mm	350mm	400mm	450mm	500mm	550mm	600mm
La	421	471	521	571	621	671	721
Lb	467.8	517.8	567.8	617.8	667.8	717.8	767.8
Lc	300	350	400	450	500	550	600
Ld	200	50	100	150	200	50	100
Le	80	130	180	230	280	330	380
Lf	389	439	489	539	589	639	689
Qa	10	12	12	12	12	14	14
Qb	6	8	8	8	8	10	10
Qc	0	1	1	1	1	2	2
Qd	0	1	1	1	1	2	2
Weight (Kg) (Note 7)	47.6	49.0	50.5	52.0	53.5	55.0	56.4

#### Vertical circulation

#### JGX16-V1R/V2R/V3R

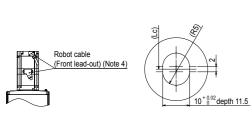

Detailed drawing B 4 × 4-φ7.3 through hole JGX16-V2R

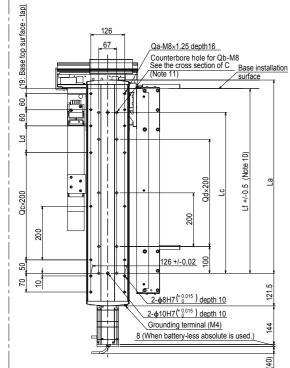

Note 2. The user wiring cannot be passed through the flexible cable carrier.

Note 8. Hexagon socket head cap bolt for fine adjustment of circulation pitch.

Note 10. Design and install the base so that it is within the described tolerance.

Maintain a work space where you can access the bolt.

Note 9. Robot slider unstoppable range from the module end.


direction may vary depending on the specifications.

Note 5. The YQLink cable fixing R is R55. This cable may become the termination connector

Note 7. The weight of the main body is a reference value. The weights of the module and robot slider are not included.

An unstoppable range of 99 mm on the main line side may vary depending on the pallet length. For details, see the manual.

JGX16-V1R Grounding terminal (M4) Power cable (Note 6) YQLink cable (Note 5) 11-M4 × 0.7 through hole Tap for securing the wiring φ11.5 spot facing depth 6 (A in the figure)
Counterbore hole for installation of base / End plate reference surface 2-M8×1 25 denth 15  $4\text{-M5} \times 0.8 \text{ depth } 12$ (For installation of eye bolt) 4-Circulation installation plate

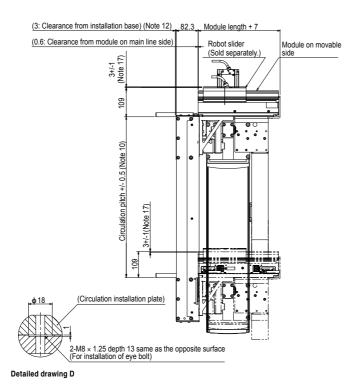

### Note 1. For details about the installation and operation procedures, see the user's manual


- Note 11. When securing the unit using the installation counterbore hole (cross section of C), peel off the dust-proof seal adhered to the inside of the axis, and then install the unit.


  Note 12. Reference value for installation of the base. Install the circulation unit so that it is not in contact with the base end.
- Note 13. This value may differ from the allowable overhang amount of the robot slider.


  For details about the payload and allowable overhand amount, see the LCMR200 specifications. Even when the circulation operation is performed with workpieces placed, the dimensions are restricted in the same manner.


  Note 14. When the pallet length is 200 mm or more, this pitch is "pallet length + 10 mm".
- However, when two sliders start at the same time, the minimum pitch is 250 mm or "pallet length  $\pm$  50 mm".
- Note 15. Two-slider simultaneous circulation can be performed only when the movable module is 500mm-module.
- Note 16. The origin position is located on the motor side.
- Note 17. Slider top surface position when the junction axis is stopped by the mechanical stopper.

#### 2-slider circulation (Note 15)

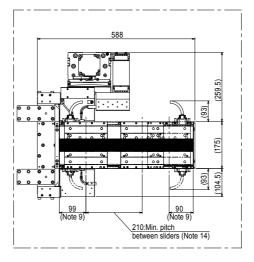


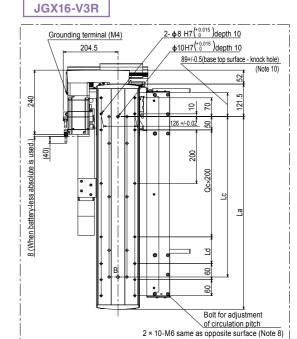

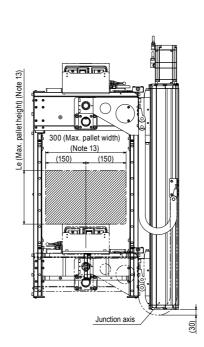

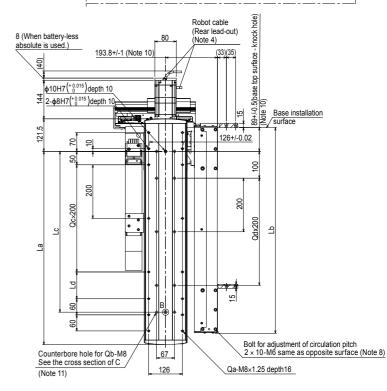



Circulation pitch	300mm	350mm	400mm	450mm	500mm	550mm	600mm
La	421	471	521	571	621	671	721
Lb	467.8	517.8	567.8	617.8	667.8	717.8	767.8
Lc	300	350	400	450	500	550	600
Ld	200	50	100	150	200	50	100
Le	80	130	180	230	280	330	380
Lf	389	439	489	539	589	639	689
Qa	10	12	12	12	12	14	14
Qb	6	8	8	8	8	10	10
Qc	0	1	1	1	1	2	2
Qd	0	1	1	1	1	2	2
Weight (Kg)(Note 7)	47.6	49.0	50.5	52.0	53.5	55.0	56.4

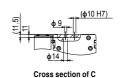

depending on the specifications.

Note 6. The power cable fixing R is R55.

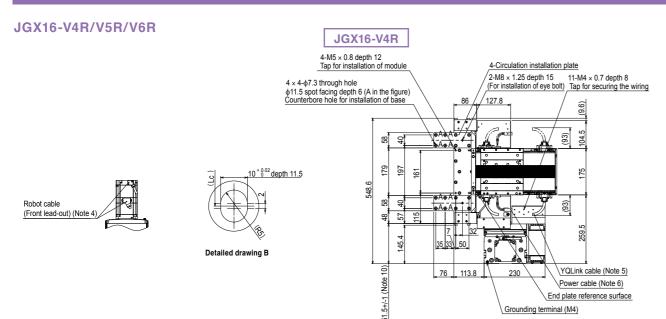


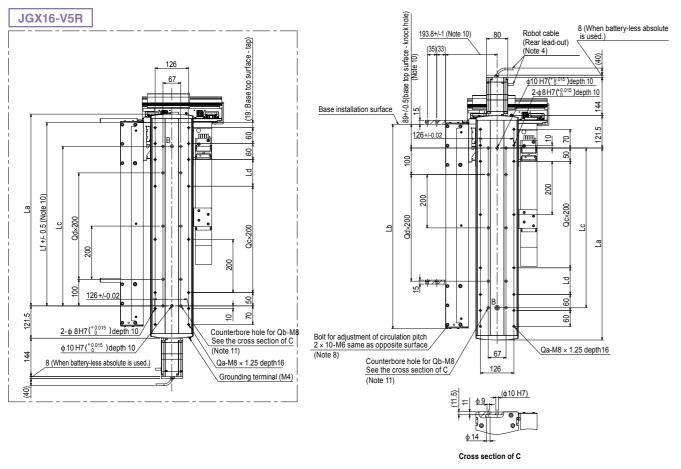



- Note 8. Hexagon socket head cap bolt for fine adjustment of circulation pitch.
- Maintain a work space where you can access the bolt.
- Note 9. Robot slider unstoppable range from the module end.


  An unstoppable range of 99 mm on the main line side may vary depending on the pallet length. For details, see the manual.
- Note 10. Design and install the base so that it is within the described tolerance.
- Note 11. When securing the unit using the installation counterbore hole (cross section of C), peel off the dust-proof seal adhered to the inside of the axis, and then install the unit.
- Note 12. Reference value for installation of the base. Install the circulation unit so that it is not in contact

2-slider circulation (Note 15)

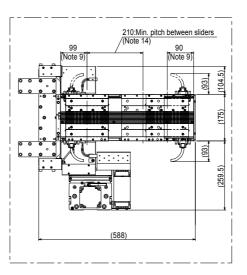

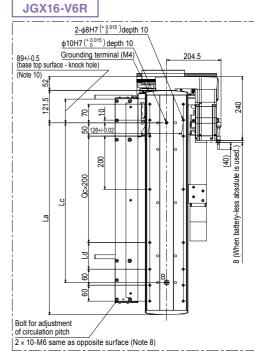

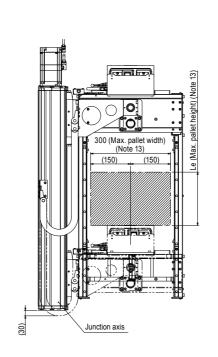

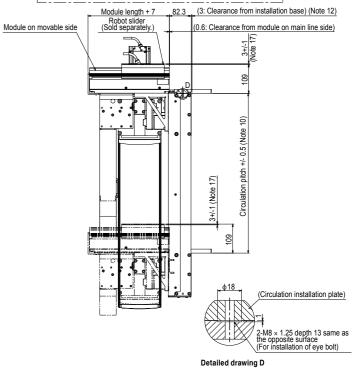

- Note 13. This value may differ from the allowable overhang amount of the robot slider.

  For details about the payload and allowable overhand amount, see the LCMR200 specifications.
- Even when the circulation operation is performed with workpieces placed, the dimensions are restricted in the same manner.
- Note 14. When the pallet length is 200 mm or more, this pitch is "pallet length + 10 mm".

  However, when two sliders start at the same time, the minimum pitch is 250 mm or "pallet length +
- Note 15. Two-slider simultaneous circulation can be performed only when the movable module is 500mm-module.

  Note 16. The origin position is located on the motor side.
- Note 17. Slider top surface position when the junction axis is stopped by the mechanical stopper

Circulation pitch	300mm	350mm	400mm	450mm	500mm	550mm	600mm
La	421	471	521	571	621	671	721
Lb	467.8	517.8	567.8	617.8	667.8	717.8	767.8
Lc	300	350	400	450	500	550	600
Ld	200	50	100	150	200	50	100
Le	80	130	180	230	280	330	380
Lf	389	439	489	539	589	639	689
Qa	10	12	12	12	12	14	14
Qb	6	8	8	8	8	10	10
Qc	0	1	1	1	1	2	2
Qd	0	1	1	1	1	2	2
Weight (Kg)(Note 7)	47.6	49.0	50.5	52.0	53.5	55.0	56.4

- Note 1. For details about the installation and operation procedures, see the user's manual.
- Note 2. The user wiring cannot be passed through the flexible cable carrier.

  Note 3. Do not use the installation hole at each location for an application other than that specified.

  Note 4. The robot cable fixing R is R30. The lead-out direction may vary depending on the
- Note 5. The YQLink cable fixing R is R55. This cable may become the termination connector depending on the specifications.

specifications.

- Note 6. The power cable fixing R is R55.

  Note 7. The weight of the main body is a reference value. The weights of the module and robot slider

# Order model: YHX-HD J (Japanese) E (English)

- \*1. CC-Link is a registered trade mark of Mitsubishi Electric Corporation.
- \*2. PROFINET is a registered trade mark of PROFIBUS Nutzerorganisation e.V. (PNO).

  \*3. EtherNet/IP is a registered trade mark of ODVA, Inc.

EP : EtherNet/IP

- \*4. EtherCAT is a patented technology and a registered trademark licensed by Beckhoff Automation GmbH (Germany).

The YHX-HD is a set model of the host controller unit, driver power unit, and related components shown below. Each unit should be assembled by the customer.



#### YHX-HD Configuration parts

#### **▶**Control unit

4 LCD

#### Host controller unit



1	LCD	Indicates the status of the controller.				
2	PoE	PoE compatible giga bit Ethernet connector.				
3	GbE	PoE non-compatible giga bit Ethernet connector.				
4	IN	LAN connector for connecting with master devices of field network communications connector (EtherNet/IP, EtherCAT, PROFINET)				
5	оит	LAN connector for connecting with other slave devices of field network communications connector (EtherNet/IP, EtherCAT, PROFINET)				
6	OP	Connector for field network communications adaptors (CC-Link)				
7	USB 2.0	Connector compatible with USB 2.0				
8	USB 3.0	Connector compatible with USB 3.0				
9	нмі	Connector for connecting with a programming pad, display and other devices				
10	SAFETY	Connect with external PLC, safety devices and the like.				
11	MODE	CPU OK output Programming pad AUTO/MANUAL select switch contact output				
12	Connector for connection between units (control signal/Power)					

Indicates the status of the controlle

This unit can control multiple robots by combining with the linear conveyor. Although the unit is compact, it is multifunctional and has an enhanced interface.

	Model	YHX-HCU
ipanese	Parts No.	KEK-M4200-0A
English	Model	YHX-HCU-E
	Parts No.	KEK-M4200-1A



#### Safety connector

Used for building up an external safety circuit while connecting with the safety dedicated port of a host controller

Model	YHX-CN-SAFE
Parts No.	KEK-M4432-00



Used for building up an external safety circuit while using the mode switch output port of a host controller unit.

Model	YHX-CN-MODE
Parts No.	KEK-M4432-10



#### HMI short circuit connector

Used when a programming pad is not connected with a host controller. Note that if not connected, robots do not operate becaus

se the controller ente	ers the state of emergency stop.	
Model	YHX-CN-HMIS	
Parts No.	KEK-M4429-00	

#### ▶Power unit

Driver power unit



1	POWER	Blue: 24 VDC control power supply is available.	
2	CHARGE	Orange: 200 VAC main power supply is available and Charge*	
3	DC INPUT	Control power supply connector (24 VDC)	
4	BATT ABS battery connector		
5	R.UNIT	Connector for connecting regenerative unit	
6	AC INPUT	Main power supply connector (Single phase / 3-phase 200 to 230 VAC)	
7	7	YQLink communications connector	
7 YQLink		Connects with IO units and linear conveyor modules.	
8	Grounding terminal		
9	9 Connector for connection between units (control signal/Power)		
10	O Connector for connection between units (high voltage power source for driving motors)		

\* Even when the main power is turned off, the lamp is lit while any charge remains in the internal capacitor.

This unit supplies power to each unit. Be sure to use it together with the host controller unit or a YQLink expansion with line

KEK-M4512-00



#### Control power supply connector

#### D. Power

Parts No.

Used when supplying the control power supply	
Model	YHX-CN-CP



#### Main power supply connector

#### D. Power

Used when supplying the main power supply.

Model	YHX-CN-DP
Parts No.	KEK-M5382-00



#### Regenerative unit short circuit connector

Used when not connecting a regenerative unit.

An error is generated if the short circuit connector of a regenerative unit is not connected.

Model	YHX-CN-RUS
Parts No.	KEK-M4431-00



#### Selection options

#### Field network

EtherCAT slave	
Model	YHX-NWS-ECAT
Parts No.	KEK-M440A-A0

EtherNet/IP adapter (slave)	
Model	YHX-NWS-ENIP
Parts No.	KEK-M440A-E0

:	PROFINET slave	
:	Model	YHX-NWS-PFNET
:	Parts No.	KEK-M440A-N0

CC-Link slave (with adapter and connector)	
Model	YHX-NWS-CCL
Parts No.	KEK-M440A-C0

#### Connector for CC-Link

CC-Link connector	
Model	YHX-CN-CCL
Parts No.	KEK-M4872-C0



CC-Link branch	CC-Link branch-out connector	
Model	YHX-CN-CCSP	
Parts No.	KEK-M4873-00	



<Cautionary notes on field networks>

The YHX controllers are not equipped with a field network board.

Entering the activation code, which is issued for each host controller, into the host controller unit enables field network functions.

The activation code certificate comes with a host controller unit.

- $^{\star}$  If purchasing a field network only later on, inform us of the serial number of the host controller unit because it is necessary to issue the activation code.
- \* When the CC-Link option is selected, the CC-Link adapter  $\times$  1, CC-Link connector  $\times$  2, and CC-Link branch connector  $\times$  1 are supplied with the product. When the CC-Link terminating connector is needed, order it separately.

The parts with the marks below are their respective constituent parts.

Host ... Host controller unit D. Power ... Driver power unit Regenerative unit ... Regenerative unit ... Regenerative unit YQLink ... YQLink expansion Drivers ... Driver unit











.....







Programming pad (cable set)

Order model: YHX-PP6L (KEK-M5110-0B)

YQLink expansion unit set

# Order model: YHX-YQL-SET (KEK-M4406-0B)



	1	STATUS	Blue: 24 VDC power supply available Red: Error
	2	YQLink	Connect with YQLink communications connector (input) driver power unit.
	3	SAFETY	Connect with external PLC, safety devices and the like.
ĺ	4	Connector for	connection between units (control signal/Power)

This unit cancels the physical restrictions of the universal controller for

YQLink expansion unit

Model	YHX-YQL
Parts No.	KEK-M4406-0A

#### Safety connector

Used for building up an external safety circuit while connecting with the safety dedicated port of a host

Model	YHX-CN-SAFE
Parts No.	KEK-M4432-00



## Development environment software YHX Studio for Standard Profile

onnector for PP cable

## Order model: YHX-SW-STUDIO-SP (KEK-M4990-10)

\* No USB key is attached.

	os	Windows 7 SP1/8/8.1/10 (64-bit version only for all)
PC operating environment	CPU	Equivalent to Intel Core (TM) i5-6200U 2.30 GHz or better.
	Memory	8 GB or larger
	Hard disc drive capacity	2 GB or more of empty space for destination of installing the YHX Studio.
	Communications port	Ethernet
	Display	1920 x 1080 or higher resolution is recommended.
	Other	Ethernet cable (Category 5 or better) USB port: One port (for USB key)
Applicable contr	ollers	YHX Host controller unit
Applicable robot	s	Robots connectable to YHX

Microsoft, Windows and Windows 7 are the registered trademarks or the trademarks of Microsoft Corporation in the United States. Other firms' names and product names appearing in this catalog are ered trademarks or the trademarks of the respective firms or products conce

YHX Studio for Standard Profile is software that is used when the YHX host controller unit of the YAMAHA robot controller YHX series is set up.



Use the touch panel screen for various operation

Model

Programming pad cable

Used when connecting a programming pad.

Model

Parts No.

Equipped with safety functions (emergency stop button and enable switch) and a USB connector.

> YHX-PP KEK-M5110-0A

YHX-PP-6M KEK-M5362-61

> Download from website

Absorbs regenerative energy generated during decelerating a robot with a large Connecting two increases the capacity to

absorb regenerative energy to two times.

Absorbable 100 W (Equivalent to RGU 3)

Maximum 2 units Forced cooling and exhaust by fan

Momentary maximum pow Number of

### Other options

#### Battery holder box

## Order model: YHX-BATT-HLD

Used to store the ABS batteries. Up to eight batteries can be stored

Model	YHX-BATT-HLD
Parts No.	KEK-M53G7-00

#### Battery holder connection cable

## Order model: YHX-BATT-15C

Used when the battery holder box is connected.

Model	YHX-BATT-15C
Parts No.	KEK-M53G4-00



### CC-Link terminating connector

# Order model: YHX-CN-CCTM

Model	YHX-CN-CCTM
Parts No.	KEK-M4874-00



STOP connector

### Order model: YHX-CN-STOIN

Used to shut off the drive power of each driver unit.

Model	YHX-CN-STOIN
Parts No.	KEK-M5869-10



#### Connector for brake power

# Order model: YHX-CN-BU

Used when the brake power is supplied externally. The driver is not needed when the brake power unit is used.

	Model	YHX-CN-BU
m	Parts No.	KEK-M4427-00



Regenerative unit set

#### Order model: YHX-RU1 (KEK-M4107-0A)

Regenerative u	nit	0
Model	YHX-RU	
Parts No.	KEK-M5850-0A	



# Regenerative unit connection cable

KEK-M5363-00

Used when connecting a regenerative unit YHX-RU-50C



### Regenerative unit (For expansion)

## Order model: YHX-RU2 (KEK-M4107-0B)

Model YHX-RU Parts No. KEK-M5850-0A	Regenerative unit	
Parts No. KEK-M5850-0A	Model	YHX-RU
	Parts No.	KEK-M5850-0A



#### Regenerative unit expansion cable

Used when adding a regenerative unit.

Model YHX-RU-EX30C KEK-M5364-00






















The customer assembles the necessary number of driver units between the host controller unit and driver power unit to use them.

### YHX-A30-SET Configuration parts

#### **▶** Driver units

#### Driver unit 30A

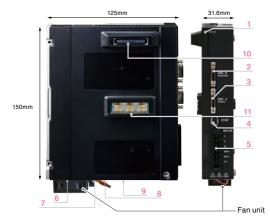

	1	STATUS	Blue lamp lit: Servo ON Blue lamp flashing: Servo OFF and ready for operation Blue/Red flashing in an alternate fashion: Servo OFF and not yet ready for operation Red flashing: Error	
	2	ENC.B	Linear scale sensor cable connection connector dedicated for circulation unit	
	3	ENC.A	Connector for connecting robot cable (encoder cable)	
	4	STOP	Use this to build up a circuit to shut off the power to a motor.  When not used, connect with the "STOP short circuit connector	
	5	MOTOR	Connector for connecting robot cable (power line)  · Output U/V/W current output, Brake output	
	6	Connector for connecting a fan	Fan unit connector	
	7	BATT connector	ABS battery connector	
	8	Power supply output for brake	Brake unit connector	
	9	Power supply input for holding braking effort	External power supply connector for brake unit or brake	
	10	Connector for connection between units (control signal/Power)		
ı	11	Connector for connection between units (high voltage power source for driving motor		

This unit drives robots. Use cables to connect with robots. The unit is connected to the left of the control unit.

30A	Model	YHX-A30
Specifications	Parts No.	KEK-M5800-1A



#### Stop short circuit connector

Used when it is not necessary to shut off the power supply to each driver unit separately.

Model	YHX-CN-STOEN
Parts No.	KEK-M5869-00




Cools down a driver unit. Attached at the bottom of a driver unit to send wind to heat sinks. A driver unit made

the 30 A specification is shipped out with a fan uni		
Model	YHX-AMP-FU	
Parts No.	KEK-M6195-00	




#### **Selection options**

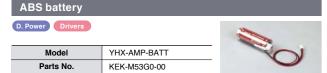

A unit for releasing braking effort of the robot\* with a brake Enables robot brake control without an external electrical wiring Installed at the bottom of a driver unit

Model	YHX-AMP-BU
Parts No.	KEK-M5317-00



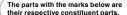


















#### Procedure to determine the regenerative unit quantity (Single-axis robot GX series)

The number of regenerative units to be connected to the D. Power is determined depending on the configuration of the single-axis robot GX series operated by each Drivers connected to this D. Power

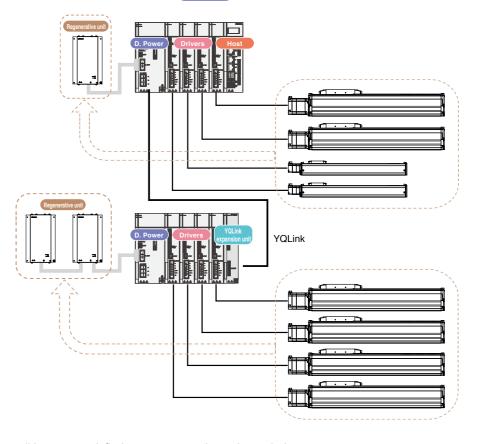

When the following conditions are satisfied, one regenerative unit needed

- 1. The total motor capacity of vertically installed single-axis robots is 400 W or more.
- 2. The vertically installed single-axis robots include the following.
  - · GX07: Lead is 5 mm and stroke is 1000 mm or more.
  - GX10: Lead is 5 mm and stroke is 500 mm or more.
  - GX10: Lead is 10 mm and stroke is 500 mm or more.
  - · GX10: Lead is 20 mm and stroke is 1200 mm or more.
- 3. The horizontally installed single-axis robots include the following.
  - GX16: Lead is 20 mm and stroke is 500 to 800 mm.
  - GX20: Lead is 20 mm and stroke is 550 to 800 mm.
- 4. The horizontally installed single-axis robots satisfy the following conditions.
  - · The total number of GX12, GX16, and GX20 robots is 3 or more.
  - · The total number of GX16 and GX20 robots is 2 or more.


When the single-axis robot with an operating duty (\*) of 50% or more is used for 1 axis or more, two regenerative units are needed.


- 1. The total number of vertically installed GX10, GX12, GX16, and GX20 robots is 8 axes or more.
- 2. The total number of vertically installed GX12, GX16, and GX20 robots is 7 axes or more.
- 3. The total number of vertically installed GX16 and GX20 robots is 4 axes or more.
- 4. The vertically installed GX20 robots are connected to 4 axes or more.
- 5. The total number of horizontally installed GX10, GX12, GX16, and GX20 robots is 6 axes or more.
- \* The operating duty is calculated by the following formula.


#### Operating duty = Total robot movement time ÷ 1 cycle time × 100[%]


For the robot that reciprocates in one cycle, the total forward and backward movement time becomes the "total robot movement time".


# External view of each unit

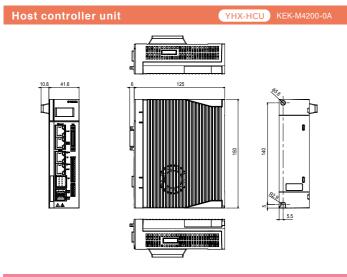


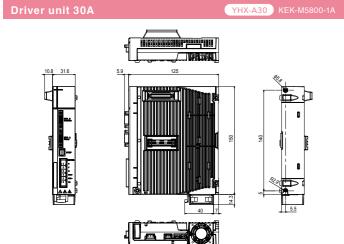

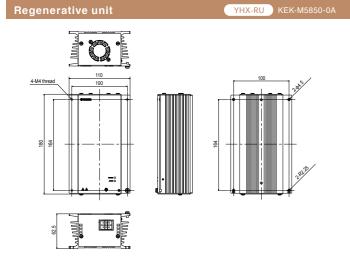

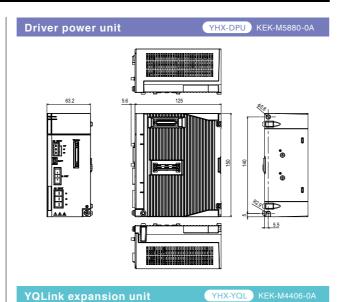

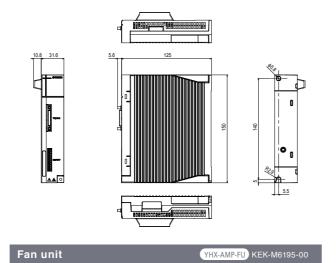

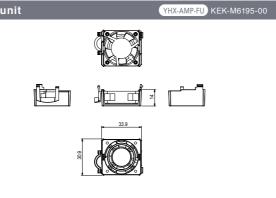



## **Basic specifications**

#### Host

#### Host controller unit

	Model	YHX-HCU
	Parts No.	KEK-M4200-0A
	Model	YHX-HCU- E
English	Parts No.	KEK-M4200-1A

	Item	Host controller unit
Power supply	Control power supply	Voltage: 21.6 to 26.4 VDC (24 V +/-10%)  Current: 3.5 A (Including PoE)
Connector	External I/F	Giga bit Ethernet Compatible with PoE yet 1 port (23 W) Not compatible with PoE yet 1 port
		Field network (Slave) Select one from the following 4 kinds.  - EtherCAT - CC-Link*  - EtherNet/IP * A separate adaptor is necessary.  - PROFINET
		USB  · USB 2.0 1 Port (Bus power 0.5 A)  · USB 3.0 1 port (Bus power 1.0 A)
	HMI	Connector for connecting programming pad
	SAFETY	Emergency stop contact output Enable switch contact output Emergency stop input
	MODE	CPU OK output Programming pad AUTO/MANUAL select key switch output
Indicator	LCD	128 x 64 dots, Yellow
Dimensions Weight Protection structure / Protection rating		41.6×150×125 (mm)
		750g
		IP20 / class 1

#### D. power

#### **Driver power unit**

Model	YHX-DPU
Parts No.	KEK-M5880-0A

Item		Driver power unit	
	Control power supply	Voltage: 21.6 to 26.4 VDC (24 V +/-10%)	
Dawer avanh		Current: 0.5A	
Power supply	Main power supply	Input: Single phase / 3-phase 180 to 253 VAC / (200 to 230 VAC +/-10%), 50/60 Hz	
		Power supply capacity: Single phase 3.5 kVA 3-phase 6 kVA	
Connection motor capacity		Single phase within 1.6 kW, 3-phase within 3.0kW / Driver unit within 16 units (16 axes)	
	Regenerative	Regenerative unit connector	
Connector	External I/F	YQLink	
	ABS Battery	ABS Battery connector	
Dimensions Weight Protection structure / Protection rating		63.2×150×125 (mm)	
		1050g	
		IP20 / class 1	

#### Regenerative unit

#### Regenerative unit

Model YHX-RU	
Parts No. KEK-M5850-0A	

Item		Regenerative unit
Power supply Input		254 to 357 VDC (Controller DCBUS connected)
Connector		Regenerative connector (For connecting regenerative unit/ For adding regenerative unit)
Dimensions		62.5×180×110 (mm)
Weight		1450g
Protection structure / Protection rating		IP20 / class 1

#### YQLink

#### YQLink expansion unit

-	
Model	YHX-YQL
Parts No.	KEK-M4406-0A

Item		YQLink expansion unit
Power supply	Control power supply	Voltage: 21.6 to 26.4 VDC (24 V +/-10%)
		Current: 0.3A
Connector	External I/F	YQLink
	SAFETY	Emergency stop input
Dimensions		31.6×150×125 (mm)
Weight		380g
Protection structure / Protection rating		IP20 / class 1

## Driver

#### **Driver unit**


#### Servo motor specifications (30A)


Model	YHX-A30
Parts No.	KEK-M5800-1A


Item		Driver unit 30 A
Power supply	Control power supply	Voltage: 21.6 to 26.4 VDC (24 V +/-10%)
		Current: 0.8A (Including brake unit power supply)
Connector	ENC.A	Encoder input
	ENC.B	Encoder input (Dedicated use)
	STOP	Gate off input, 2 points
		Gate status output, 1 point
	MOTOR	Motor drive power supply output
		Brake power supply output
	ABS Battery	ABS Battery connector
	Fan unit connector	Accessory fan unit connection
	Brake unit connector	Brake unit is connectable.
Dimensions		31.6×150×125 (mm)
Weight		570 g
Protection structure / Protection rating		IP20 / class 1


# External view of YHX unit combination


# Combination of host controller (HCU), driver unit (A30), and driver power unit (DPU)

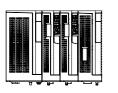


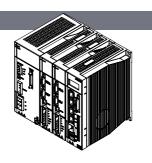


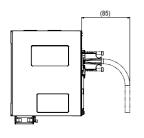

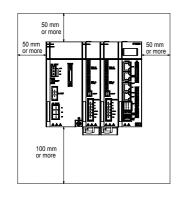

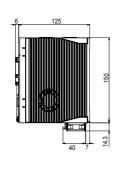

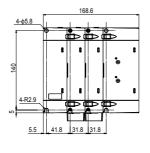


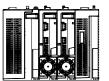



## Combination of host controller (HCU) and driver power unit (DPU)






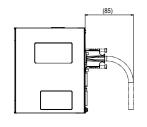

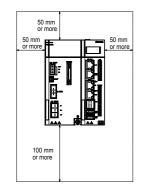

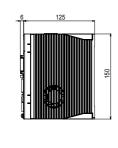

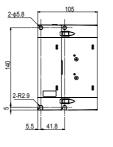





Read the instruction manual thoroughly to operate the robot in a correct manner.



#### **Robotics Operations FA Section**

127 Toyooka, Kita-ku, Hamamatsu, Shizuoka 433-8103, Japan Tel. +81-53-525-8350 Fax. +81-53-525-8378

URL https://global.yamaha-motor.com/business/robot/ E-MAIL robotn@yamaha-motor.co.jp